



WSP Italy[®]
Wheels Spare Parts

2015-2016

WSP Italy Alloy Wheels Manufacturing

INDEX

spare wheels adaptable for

Alfa Romeo.....	03
Audi	07
Bmw	16
Chevrolet	25
Chrysler/Jeep	26
Citroen	27
Fiat	28
Ford	33
Honda	36
Hyundai	38
Infiniti	39
Lancia	40
Land Rover.....	42
Lexus.....	46
Mazda.....	47
Mercedes	48
Mini.....	55
Mitsubishi	60
Nissan.....	61
Opel	62
Peugeot	65
Porsche	67
Renault.....	74
Saab.....	75
Seat.....	76
Skoda	77
Subaru.....	78
Toyota.....	79
Volkswagen.....	88
Volvo	97

*Not available for shipment EU Market
**End of the line

1. GUARANTEE

Our compatible spare wheels approved according to the regulation UNECE R124 are sold exclusively as replacement spare parts (for summer and winter season) for repairing purposes. They must be installed in accordance with the dimensions showed in the vehicle approval. The installations different from the ones provided by the UN-ECE R124 approval (1) are not permitted and will void the warranty. On the product box and/or on the conformity certificate you can find the serial number of the wheel to be used for the activation of the guarantee and for validating the purchase of an authentic WSP Italy product, approved and safe. Please register your wheel within 15 days by the purchasing date of the product ; it shall prevail the title of purchase. The WSP ITALY alloy wheels, a product of high technology, are manufactured with extreme care and precision. Despite their high quality, should the product show any defect, it will be covered by a guarantee having the following terms and conditions. In the sales direct to the consumer the legal guarantee according directive 1999/44 EC is 24 months from the purchasing date. This is a conformity guarantee that ensures non conformity defect of the product at purchasing specifications. This legal guarantee doesn't cover defects arising from wear and tear and / or improper use and / or bad maintenance of the product. Any other form of guarantee and/or compensation, conventional or legal, is excluded. The guarantee is valid only if the purchasing date is confirmed by the seller's stamp and accompanied by a recognized sales document or by online registration. The guarantee is valid in all the countries in which the wheels are officially sold by WSP ITALY or by an authorized distributor.

1. GARANZIA

I nostri cerchi di ricambio compatibile omologati UNECE R124 sono venduti esclusivamente per essere destinati a ricambio e sostituzione (estate-inverno) ai fini di riparazione. Vanno installati in conformità alle dimensioni previste in omologazione del veicolo. Le installazioni difformi da quanto previsto in omologazione UNECE R124 (1) non sono consentite e fanno decadere la validità della garanzia. Sulla scatola del prodotto e/o sul certificato di conformità trovi il numero seriale della ruota da utilizzare per l'attivazione della garanzia e validare l'acquisto di un prodotto autentico WSP Italy, omologato e sicuro. Effettua la registrazione entro 15 giorni dall'acquisto del prodotto, farà fede il titolo d'acquisto.

I cerchi in lega WSP ITALY, prodotto di alta tecnologia, sono fabbricati con la massima cura e precisione. Qualora tali cerchi, nonostante la loro alta qualità, dovessero presentare dei difetti, questi sono coperti da una garanzia alle seguenti condizioni:

Nelle vendite dirette a consumatori la garanzia legale ai sensi della direttiva 1999/44 CE è di 24 mesi dalla data d'acquisto. Essa è una garanzia di conformità e copre difetti di non conformità del prodotto alle specifiche di acquisto. Tale garanzia legale non copre difetti derivanti da usura e/o non corretto utilizzo e/o cattiva manutenzione del prodotto. Qualsiasi altra forma di garanzia/risarcimento, legale o convenzionale, rimane esclusa. La garanzia può essere fatta valere solo se la data d'acquisto del consumatore finale confermata dal timbro del venditore ed accompagnata da un documento di vendita avente data certa o da attivazione online. La garanzia è valida in tutti i Paesi in cui le ruote sono ufficialmente vendute da WSP ITALY o da un distributore autorizzato.

(1) The condition of validity is ensured when there is correspondence between the approval number of the vehicle on which the wheel has been installed and the homologation ECE R124 which indicates the installation of that wheel on the vehicle with the relative number of approval. The condition of validity is also guaranteed only when there is correspondence between the number of its approval of the vehicle on which is installed on the wheel and the homologation ECE R124 which includes the installation on this vehicle and indicates the relative number of approval

(1) La condizione di validità è garantita quando esiste corrispondenza tra il numero di omologazione proprio del veicolo su cui viene installato il cerchio e l'omologazione UNECE R124 che prevede l'installazione su tale veicolo e ne indica il relativo numero di omologazione. La condizione di validità è altresì garantita solo quando esiste corrispondenza tra il numero di omologazione proprio del veicolo su cui viene installato il cerchio e l'omologazione UNECE R124 che prevede l'installazione su tale veicolo e ne indica il relativo numero di omologazione

2. CHECK ON PRODUCTS

All the wheels sold by WSP ITALY, with reference to codes, models, design, finish and accessories must be checked upon receipt. In case of claims about possible damages to the wheels for breakage, scratches or anything else that may be attributed to transportation, please inform immediately the courier. In case of claims about any other defects, you have to forward your claim to WSP ITALY within 24 hours from the receipt of goods.

2. VERIFICA PRODOTTO

Tutte le ruote vendute da WSP ITALY, in riferimento a codici, modelli, design, finitura e accessori devono essere controllate all'atto del ricevimento. In caso di reclamo su eventuali danni per rottura del cerchio, graffi o quant'altro possa essere dovuto al trasporto, si prega di informare immediatamente il corriere. Mentre in caso di reclami relativi a qualsiasi altro difetto, si prega di inoltrare reclamo a WSP ITALY entro il termine massimo di 24 ore dal ricevimento della merce.

3. ASSEMBLY

The wheels must be mounted according to all the indications stated in the Technical Cards. Before mounting the tyre on the wheel, you must follow the listed instructions very carefully:

- The wheels must be suitable for the vehicle (special fitment);
- No part of the vehicle (clamp, brakes, shocks-absorber etc.) must be in touch with the wheel (3 mm tolerance recommended);
- All the accessories (bolts, nuts, reduction rings) must be adapted.
- No claim will be accepted if the wheels won't be mounted following, instructions explained above.
- No claim will be accepted if goods wrongly supplied will be used.
- For mounting problems and / or discrepancies on the adaptability arising from any use or application not corresponding to the information provided by WSP Italy and/or not described in the attached manual, the validity of the guarantee and the right to reimbursement and acceptance of any complaints is declined with immediate effect.

3. MONTAGGIO

I cerchi devono essere montati rispettando le indicazioni fornite nelle relative schede tecniche di produzione. Prima di montare il pneumatico sul cerchio, bisogna seguire attentamente tali istruzioni:

- Il cerchio deve essere adatto al tipo di veicolo ;
- Nessuna parte del veicolo (pinza, freni, ammortizzatori etc.) deve essere in contatto col cerchio (consigliamo tolleranze di almeno 3 mm);
- Tutti gli accessori (bulloni, dadi, anelli di centraggio) devono essere adatti secondo l'applicazione richiesta;
- Nessun reclamo sarà accettato se i cerchi non sono montati seguendo le precedenti istruzioni.
- Nessun reclamo sarà accettato se sono utilizzati cerchi forniti erroneamente.
- Per problemi di montaggio e/o discordanze sull'adattabilità derivanti da un qualsiasi uso o impiego non corrispondente alle indicazioni fornite da WSP Italy e/o non descritte nel manuale allegato, decade con effetto immediato la validità della garanzia ed il diritto a rimborsi e riconoscimenti di eventuali reclami.

4. RULES FOR CLEANING

It is recommend to keep clean the surface of the wheel and prevent it from coming into contact with substances that may alter it, particularly salty deposits. Do not use high-pressure jets to clean, nor acids neither abrasive/corrosive means that may damage or scratch the chromium plated surface such as powders or metallic blades. It is recommended to use only water and neutral soap with a soft cloth for delicate surfaces. It is recommended to avoid during car-washing the use of the some detergents used to wash the engine and the underbody.

4. REGOLE PER IL LAVAGGIO

Si consiglia di mantenere pulita la superficie del cerchio ed evitare che questo entri in contatto con sostanze che possano alterarlo, in particolare depositi salini. Non usare getti ad alta pressione, né acidi e mezzi abrasivi o corrosivi che possano danneggiare o graffiare la superficie cromata come polveri o lame metalliche. Si consiglia di usare solo acqua e sapone neutro con un panno per superfici delicate. Si consiglia di evitare che nell'auto-lavaggio siano usati gli stessi detersivi utilizzati per lavare il motore ed il sottoscocca.

5. RESPONSABILITY

WSP ITALY declines any responsibility for damages caused by improper assembly of the wheels to vehicles or for not indicated fitments or also in case of mistakes made by the staff in charge for assembly.

5. RESPONSABILITA'

WSP ITALY declina ogni responsabilità in caso di danni dovuti a montaggio dei cerchi non corretto o applicazioni di cerchi a veicoli non indicati o anche in caso di errori commessi dagli addetti al montaggio.

6. LAWS

This guarantee is regulated by Italian law based on European directive.

6. LEGGE APPLICABILE

Tale garanzia è regolata dalla legge italiana basata su direttiva comunitaria.

LA CERTIFICAZIONE ISO 9001:2008

WSP Italy è certificata per la "Progettazione, produzione in outsourcing e commercializzazione di ruote in lega leggera" con certificato rilasciato da TÜV Rheinland.

CERTIFICATION ISO 9001:2008

WSP Italy is certified for the "Design, Production in outsourcing and marketing of wheels in light alloy" with certificate issued by TÜV Rheinland.

LA CERTIFICAZIONE DEI PRODOTTI

I prodotti WSP Italy sono tutti sottoposti a test e prove secondo le norme Inmetro (Brasile) JWL/VIA (Giappone), Gost-R (Russia) ed omologati secondo Regolamento ECE/ONU. Per questo abbiamo ottenuto da TÜV Rheinland la certificazione di sistema gestione qualità che soddisfa i requisiti del diritto stradale internazionale ECE/ONU, europeo e tedesco (StVZO). WSP Italy è, inoltre, ufficialmente accreditata dal Ministero dei Trasporti italiano e dalla VCA (Vehicle Certification Agency) del ministero dei trasporti dell'UK.

PRODUCT CERTIFICATION

The WSP Italy products are all tested in accordance with Inmetro (Brazil) JWL/VIA rules (Japan) and Gost-R (Russia). They have already been approved according to the Regulation No. 124 UN/ECE. Due to this skill we have become a company with a certified Management System granted by TÜV Rheinland satisfying the requirements of the International (UN/ECE), European and German (StVZO) road traffic legislation. WSP Italy is also officially accredited by the Italian Ministry of Transport and the VCA (Vehicle Certification Agency) of the Ministry of Transport of the UK.

IL CICLO PRODUTTIVO

WSP Italy produce le proprie ruote sostitutive replica a partire dalla progettazione attenta alla individuazione di tutti gli aspetti costruttivi e dimensionali della ruota sostituiva replica da realizzare. Attraverso un processo di reverse - engineering viene dedotta la matematica della superficie ed elaborato il disegno dello stampo. Dopo la realizzazione dello stampo vengono costruiti i primi prototipi secondo uno specifico processo di lavorazione e su di essi vengono effettuate le prove ed i test che di seguito saranno descritti, con gli esperti degli enti di omologazione come il Centro Prove Autoveicoli del Ministero dei Trasporti Italiano e l'agenzia VCA del Ministero dei Trasporti britannico. La fabbricazione e la gestione logistica dei nostri prodotti viene effettuata sulla base di un sistema ERP (Enterprise Resource Planning).

PRODUCTION CYCLE

WSP Italy produces its own replacement wheels from a careful planning to the identification of all constructive and dimensional aspects of the replica replacement wheel to be produced. Through a process of reverse - engineering is obtained the mathematics of the surface and prepared the design of the mould. After the realization of the mould, the first prototypes are built according to a specific manufacturing process and then are tested with the support of experts of the board for approvals as the Vehicle Test Center of the Italian Ministry of Transport and the VCA agency of the Ministry of Transport of the UK (tests will be described below). The manufacturing and logistics management of our products are made on the basis of an ERP system (Enterprise Resource Planning).

TEST ED OMOLOGAZIONE DEI PRODOTTI - IL LABORATORIO

I cerchi in lega WSP Italy vengono sottoposti a severi test di resistenza. In fase di produzione viene costantemente controllata la qualità, la composizione e la resistenza a trazione della lega. Anche la finitura superficiale è testata per la resistenza alla corrosione in un ambiente fortemente corrosivo di nebbie saline.

I diversi modelli, prima della produzione di massa, vengono testati con prove di impatto (con pesi fino a 1000 kg), flessione rotante (da 200.000 a 1 milione di cicli) e rotolamento (2000 km). Queste prove, condotte nei laboratori della WSP Italy con i tecnici del Ministero dei Trasporti Italiano (CPA - Centro Prove Autoveicoli) e Britannico (VCA - Vehicle Certification Agency) determinano l'idoneità e la resistenza delle nostre ruote alle sollecitazioni più diverse che simulano il moto in curva piuttosto che l'urto contro un marciapiede o il comportamento sotto carico in una lunga, percorrenza.

PRODUCT TEST AND TYPE-APPROVAL - LABORATORY

The WSP Italy alloy wheels are subject to strict resistance tests. The quality, the composition and the alloy tensile strength are constantly checked during manufacturing. The surface finishing is also tested for corrosion resistance, in a strongly corrosive place full of saline fogs.

Before starting the mass production, the different models are tested through impact tests (with weights till 1.000 kg.), rotating bending (from 200.00 to 1 million cycles) and rolling (2.000 km.). These tests, that are carried out in the WSP Italy laboratories in cooperation with the technicians of the Italian Transport's Ministry, confirm the qualification and the resistance of our wheels to the different types of stress that simulate a motion in the curve, an impact against a sidewalk or the behaviour in a long distance under load.

Per effettuare tali controlli la nostra Azienda si è dotata di un moderno e completo laboratorio di prova, unico nel suo genere in Italia e raro esempio in Europa. Tale laboratorio, per il quale è in itinere la certificazione ISO 17025, è accreditato dal VCA.

To perform these tests, our company is equipped with up-to-date machinery in a test laboratory unique in Italy and rare example in Europe. This laboratory, which is being certified to ISO 17025, is accredited by the VCA.





CONTROLLO DI CONFORMITA' DEL PRODOTTO

Perché vi sia conformità del prodotto omologato è condizione indispensabile che vi sia conformità del ciclo produttivo ed è per questo che WSP Italy controlla tutto il processo (che si svolge in parte in Cina su impianti propri controllati, certificati ed accreditati dai Ministeri dei Trasporti Italiano e Britannico), dalla progettazione alla schedulazione della produzione fino alla fabbricazione, lo stoccaggio e la logistica.

Per assicurare ciò Acacia monitora, con propri ingegneri aventi consolidata esperienza nel settore, la produzione e tutti i parametri che la caratterizzano ed il prodotto finito con prove distruttive a campione ripetitive dei test di omologazione.

I cerchi in lega WSP Italy dopo la produzione sono controllati uno ad uno e sulla scatola di imballaggio viene applicato un contrassegno del Quality Control Department che ne garantisce la qualità, secondo standard prestabiliti, sotto il profilo del bilanciamento, del rotolamento, delle tolleranze dimensionali, della verniciatura e della finitura superficiale.

PRODUCT CONFORMITY CONTROL

In order to get conformity for the type-approved product, it is also necessary to get conformity during the production cycle (which takes place partly in China on their own facilities inspected, certified and accredited by the Ministries of Transport of Italy and United Kingdom). It is for this reason that WSP Italy tests the whole process, starting from the design to the production schedule, till the manufacturing.

To ensure that Acacia monitors, with its engineers with experience in the field, the production and all the parameters that characterize it and the finished product with repetitive destructive tests on a sample of the test package.

After manufacturing, WSP Italy alloy wheels are checked again one by one; the "Quality Control Department" applies the sticker on the external packaging which guarantees the quality, according to set standards concerning balancing, rolling, dimensional tolerances, painting and special finish.



Check product's authenticity on website www.wspitaly.com
Verifica l'autenticità del prodotto su www.wspitaly.com

spare wheels adaptable only for

Alfa Romeo



Silver



Matt Gun
Metal

Romeo

Wheel CODE: W257/AL57

Size	PCD	ET	Hub Ø	Matt Gun Metal	Silver
7,5x18	5x110	41	65,1	#	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Alfa Romeo

Check product's authenticity on website www.wspitaly.com

Verifique a autenticidade do produto em www.wspitaly.com



Polished Silver



Matt Gun Metal



Dull Black Polished

Giulietta

Wheel CODE: W256/AL56

Size	PCD	ET	Hub Ø	Silver Polished	Silver	Dull Black Polished	Matt Gun Metal
7,5x17	5x110	41	65,1	#	#	#	#
7,5x18	5x110	41	65,1	#	#	#	#



Anthracite Polished



Silver

MaRs MiTo

Wheel CODE: W255/AL55

Size	PCD	ET	Hub Ø	Anthracite Polished	Silver
7,0x16	4x98	39	58,1	#	#
7,0x17	4x98	39	58,1	#	#



Matt Gun Metal



Anthracite Polished



Hyper Silver

MiTo

Wheel CODE: W254/AL54

Size	PCD	ET	Hub Ø	Hyper Silver	Matt Gun Metal	Anthracite Polished
7,0x17	4x98	39	58,1	#	#	#
7,5x18	4x98	42	58,1	#	#	#

spare wheels adaptable only for

Alfa Romeo

Check product's authenticity on website www.wspitaly.com
www.wspitaly.com から商品が本物かどうかを確認してください。



Diamond Black



Matt Gun Metal



Silver

Cannes

Wheel CODE: W251/AL51

Size	PCD	ET	Hub Ø	Silver	Diamond Black	Matt Gun Metal
8,0x18	5x98	32	58,1	#		
8,0x18	5x108	36.5	58,1	#		
8,0x18	5x110	41	65,1	#	#	
8,0x19	5x110	41	65,1	#	#	#



Prime

Wheel CODE: W252/AL52

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x98	35	58,1	#
7,0x17	5x98	35	58,1	#
7,5x17	5x110	35	65,1	#



Savona

Wheel CODE: W250/AL50

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x110	34	65,1	#
7,0x16	5x98	35	58,1	#
7,0x17	5x98	35	58,1	#
7,0x17	5x110	33	65,1	#



Mat Gun Metal



Anthracite Polished

Aiace

Wheel CODE: W569/AU69

Size	PCD	ET	Hub Ø	Anthracite Polished	Mat Gun Metal
8,5x20	5x112	33	66,6	#	#
8,5x20	5x112	36	57,1	#	#
8,5x20	5x112	43	66,6	#	#
8,5x20	5x112	45	66,6	#	#
9,0x20	5x112	26	66,6	#	#
9,0x20	5x112	29	66,6	#	#
9,0x20	5x112	35	66,6	#	#

Audi



Matt Gun Metal Polished



Hyper Silver



Matt Gun Metal

Giasone 19" 20"

Wheel CODE: W567 / AU67

Size	PCD	ET	Hub Ø	Matt Gun Metal Pol.	Matt Gun Metal	Hyper Silver
8,0x19	5x112	27	66,6	#	#	#
8,0x19	5x112	49	57,1	#	#	#
8,5x19	5x112	32	66,6	#	#	#
8,5x19	5x112	36	66,6	#	#	#
8,5x19	5x112	42	57,1	#	#	#
8,5x19	5x112	43	66,6	#	#	#
8,5x19	5x112	45	66,6	#	#	#
9,0x19	5x112	32	66,6	#	#	#
9,0x19	5x112	33	66,6	#	#	#
9,0x19	5x112	52	57,1	#	#	#
8,5x20	5x112	33	66,6	#	#	#
8,5x20	5x112	43	66,6	#	#	#
8,5x20	5x112	45	66,6	#	#	#
9,0x20	5x112	29	66,6	#	#	#
9,0x20	5x112	37	66,6	#	#	#
9,0x20	5x112	37	57,1	#	#	#
9,0x20	5x112	52	57,1	#	#	#

Giasone 16" 17" 18"

Wheel CODE: W567 / AU67

Size	PCD	ET	Hub Ø	Matt Gun Metal Pol.	Matt Gun Metal	Hyper Silver
7,5x16	5x112	28	66,6	#	#	#
7,5x16	5x112	37	66,6	#	#	#
7,5x16	5x112	45	66,6	#	#	#
7,0x17	5x112	43	57,1	#	#	#
7,0x17	5x112	47	57,1	#	#	#
7,5x17	5x112	28	66,6	#	#	#
7,5x17	5x100	36	57,1	#	#	#
7,5x17	5x112	45	66,6	#	#	#
7,5x17	5x112	51	57,1	#	#	#
8,0x17	5x112	26	66,6	#	#	#
8,0x17	5x112	30	66,6	#	#	#
8,0x17	5x112	39	66,6	#	#	#
8,0x17	5x112	47	66,6	#	#	#
7,0x18	5x112	43	57,1	#	#	#
7,5x18	5x100	39,5	57,1	#	#	#
7,5x18	5x112	43	66,6	#	#	#
7,5x18	5x112	51	57,1	#	#	#
7,5x18	5x112	54	57,1	#	#	#
8,0x18	5x112	26	66,6	#	#	#
8,0x18	5x112	34	57,1	#	#	#
8,0x18	5x112	39	66,6	#	#	#
8,0x18	5x112	41	66,6	#	#	#
8,0x18	5x112	43	57,1	#	#	#
8,0x18	5x112	46	57,1	#	#	#
8,0x18	5x112	47	66,6	#	#	#
8,0x18	5x112	52	57,1	#	#	#
8,5x18	5x112	29	66,6	#	#	#
8,5x18	5x112	32	66,6	#	#	#



Glossy Black Polished



Hyper Silver



Matt Gun Metal



Dull Bronze Polished

Vittoria

Wheel CODE: W568/AU68

Size	PCD	ET	Hub Ø	Glossy Black Pol.	Matt Gun Metal	Hyper Silver	Dull Bronze Polished
8,5x19	5x112	42	57,1	#	#	#	#
8,5x19	5x112	43	66,6	#	#	#	#



Gea

Wheel CODE: W566/AU66

Size	PCD	ET	Hub Ø	Hyper Silver
8,0x17	5x112	26	66,6	#
8,0x17	5x112	39	66,6	#
8,0x17	5x112	47	66,6	#
8,0x17	5x112	48	57,1	#
8,0x18	5x112	39	66,6	#
8,0x18	5x112	43	57,1	#
8,0x18	5x112	47	66,6	#

spare wheels adaptable only for

Audi

Check product's authenticity on website www.wspitaly.com
 عزيزي العميل بالتحقق من صحة المنتج على موقعنا على الانترنت www.wspitaly.com

UNDERCUT TECHNOLOGY



Dull Black Polished

UNDERCUT TECHNOLOGY



Matt Gun Metal

UNDERCUT TECHNOLOGY



Matt Gun Metal Polished

Medea

Wheel CODE: W565/AU65

Size	PCD	ET	Hub Ø	Matt Gun Metal Pol.	Matt Gun Metal	Dull Black Polished
7,5x18	5x112	54	66,6	#	#	#
8,0x18	5x112	46	57,1	#		
8,0x18	5x112	39	66,6	#		
8,0x18	5x112	47	66,6	#	#	#
8,0x18	5x112	48	57,1	#		
8,5x19	5x112	32	66,6	#	#	#
8,5x19	5x112	36	57,1	#		
8,5x19	5x112	42	57,1	#	#	#
8,5x19	5x112	43	66,6	#	#	#
9,0x20	5x112	29	66,6	#	#	#
9,0x20	5x112	37	66,6	#	#	#

Audi



Silver



Matt Gun Metal



White

Afrodite

Wheel CODE: W564/AU64

Size	PCD	ET	Hub Ø	Silver	Matt Gun Meta	White
8,0x19	5x112	27	66,6	#	#	#
8,5x20	5x112	33	66,6	#	#	#

Seattle

Wheel CODE: W563/AU63

Size	PCD	ET	Hub Ø	Silver
7,5x17	5x112	28	66,6	#
7,5x17	5x112	45	57,1	#
7,5x17	5x112	45	66,6	#
8,0x18	5x112	39	66,6	#
8,0x18	5x112	43	57,1	#
8,0x18	5x112	46	57,1	#
8,0x18	5x112	47	66,6	#
8,5x19	5x112	32	66,6	#
8,5x19	5x112	43	66,6	#
8,5x19	5x112	43	57,1	#



Amalfi

Wheel CODE: W562/AU62

Size	PCD	ET	Hub Ø	Silver
8,0x17	5x112	39	66,6	#
8,0x17	5x112	40	57,1	#
8,0x17	5x112	47	66,6	#
8,0x17	5x112	48	57,1	#
8,0x18	5x112	26	66,6	#
8,0x18	5x112	31	66,6	#
8,0x18	5x112	35	57,1	#
8,0x18	5x112	39	66,6	#
8,0x18	5x112	43	57,1	#
8,0x18	5x112	46	57,1	#
8,0x18	5x112	47	66,6	#
8,5x19	5x112	32	66,6	#
8,5x19	5x112	36	57,1	#
8,5x19	5x112	45	57,1	#



spare wheels adaptable only for

Audi

Check product's authenticity on website www.wspitaly.com
Überprüfen Sie die Authentizität des Produktes auf www.wspitaly.com

Kassel

Wheel CODE: W561/AU61

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x112	39	66,6	#
7,0x16	5x112	40	57,1	#
7,0x16	5x112	42	57,1	#
7,5x17	5x112	37	66,6	#
7,5x17	5x112	43	57,1	#
7,5x17	5x112	45	66,6	#
7,5x17	5x112	45	57,1	#



Silver



Matt Gun Metal

Pompei

Wheel CODE: W560/AU60

Size	PCD	ET	Hub Ø	Matt Gun Metal	Silver
8,0x17	5x112	39	66,6	#	#
8,0x17	5x112	40	57,1	#	#
8,0x17	5x112	47	66,6	#	#
8,0x17	5x112	48	57,1	#	#
8,0x18	5x112	26	66,6	#	#
8,0x18	5x112	31	66,6	#	#
8,0x18	5x112	39	66,6	#	#
8,0x18	5x112	41	66,6	#	#
8,0x18	5x112	43	57,1	#	#
8,0x18	5x112	46	57,1	#	#
8,0x18	5x112	47	66,6	#	#
8,0x18	5x112	48	57,1	#	#
8,5x19	5x112	32	66,6	#	#
8,5x19	5x112	36	57,1	#	#
8,5x19	5x112	43	66,6	#	#
8,5x19	5x112	45	57,1	#	#
9,0x20	5x112	29	66,6	#	#
9,0x20	5x112	35	66,6	#	#
9,0x20	5x112	37	66,6	#	#



Hyper Anthracite



Black Polished

Cosma Two

Wheel CODE: W557/AU57



Anthracite Polished

Size	PCD	ET	Hub Ø	Hyper Anthracite	Black Polished	Anthracite Polished
7,0x16	5x112	39	66,6	#		#
7,0x16	5x112	40	57,1	#		#
7,0x16	5x112	42	66,6	#		#
7,0x16	5x112	42	57,1	#		#
7,5x17	5x112	28	66,6	#	#	#
7,5x17	5x112	30	66,6	#		#
7,5x17	5x112	34	57,1	#	#	#
7,5x17	5x112	35	57,1	#		#
7,5x17	5x112	45	57,1	#		#
7,5x17	5x112	45	66,6	#		#
8,0x18	5x112	30	66,6	#	#	#
8,0x18	5x112	31	66,6	#		#
8,0x18	5x112	35	57,1	#	#	#
8,0x18	5x112	45	57,1	#	#	#
8,5x19	5x112	32	66,6	#	#	#
8,5x19	5x112	35	57,1	#	#	#
8,5x19	5x112	36	57,1	#	#	#
8,5x19	5x112	45	57,1	#	#	#



Potenza

Wheel CODE: W558/AU58

Size	PCD	ET	Hub Ø	Hyper Silver
8,5x18	5x112	29	66,6	#
8,5x18	5x112	45	57,1	#
8,5x18	5x112	45	66,6	#
8,5x18	5x112	46	57,1	#
8,5x19	5x112	32	66,6	#
8,5x19	5x112	36	57,1	#
8,5x19	5x112	42	57,1	#

spare wheels adaptable only for

Audi

Check product's authenticity on website www.wspitaly.com
Vérifie l'authenticité du produit en cliquant sur le site www.wspitaly.com



Hyper Anthracite



Matt Gun Metal



Anthracite Polished

Alabama

Wheel CODE: W555/AU55

Size	PCD	ET	Hub Ø	Hyper Anthracite	Matt Gun Metal	Anthracite Polished
8,5x19	5x130	62	71,6	#	#	#
9,0x21	5x130	44	71,6	#	#	#



Anthracite Polished



Hyper Silver

Wien

Wheel CODE: W551/AU51

Size	PCD	ET	Hub Ø	Matt Gun Metal	Anthracite Polished	Hyper Silver
8,0x18	5x130	56	71,6	#	#	#
9,0x20	5x130	60	71,6	#	#	#



Matt Gun Metal



Canyon

Wheel CODE: W550/AU50

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x112	30	66,6	#
7,0x16	5x112	35	57,1	#
7,0x16	5x112	39	66,6	#
7,0x16	5x112	40	57,1	#
7,0x16	5x112	42	57,1	#
7,0x16	5x112	46	66,6	#
7,0x16	5x112	47	57,1	#
7,0x16	5x112	48	57,1	#
7,5x17	5x112	28	66,6	#
7,5x17	5x112	30	66,6	#
7,5x17	5x112	34	57,1	#
7,5x17	5x112	35	57,1	#
7,5x17	5x112	37	66,6	#
7,5x17	5x112	45	57,1	#
7,5x17	5x112	45	66,6	#
8,0x18	5x112	30	66,6	#
8,0x18	5x112	31	66,6	#
8,0x18	5x112	34	57,1	#
8,0x18	5x112	35	57,1	#
8,0x18	5x112	45	57,1	#

Vancouver**

Wheel CODE: W534/AU34

Size	PCD	ET	Hub Ø	Silver Shine
7,0x16	5x112	39	57,1	#
7,0x16	5x112	40	57,1	#
7,5x17	5x112	33	57,1	#



spare wheels adaptable only for

BMW

Check product's authenticity on website www.wspitaly.com
ürünün özgünlüğünü www.wspitaly.com den kontrol ediniz



Daytona

Wheel CODE: W679/BM79

Size	PCD	ET	Hub Ø	Anthracite Polished
8,5x19	5x120	25	72,6	#
8,5x19	5x120	33	72,6	#
9,0x19	5x120	25	72,6	#
9,0x19	5x120	32	72,6	#
9,0x19	5x120	44	72,6	#
9,5x19	5x120	39	72,6	#
10x19	5x120	34	72,6	#
8,5x20	5x120	25	72,6	#
8,5x20	5x120	33	72,6	#
9,0x20	5x120	32	72,6	#
9,0x20	5x120	44	72,6	#
10x20	5x120	34	72,6	#
10x20	5x120	41	72,6	#

Achille

Wheel CODE: W681/BM81

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x17	5x120	32	72,6	#
7,5x17	5x120	34	72,6	#
7,5x17	5x120	37	72,6	#
7,5x17	5x120	43	72,6	#
8,0x17	5x120	34	72,6	#
8,0x17	5x120	53	72,6	#
8,0x19	5x120	29	72,6	#
8,0x19	5x120	30	72,6	#
8,0x19	5x120	36	72,6	#
8,0x19	5x120	37	72,6	#
8,5x19	5x120	38	72,6	#
8,5x19	5x120	47	72,6	#
9,0x19	5x120	39	72,6	#
9,0x19	5x120	40	72,6	#
9,0x19	5x120	41	72,6	#
9,0x19	5x120	42	72,6	#





Ilio

Wheel CODE: W682/BM82

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x19	5x120	30	72,6	#
8,0x19	5x120	36	72,6	#
8,0x19	5x120	37	72,6	#
8,5x19	5x120	47	72,6	#
9,0x19	5x120	39	72,6	#
9,0x19	5x120	41	72,6	#
9,0x19	5x120	42	72,6	#

Zeus

Wheel CODE: W680/AU80

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x18	5x120	34	72,6	#
8,5x18	5x120	37	72,6	#
8,5x18	5x120	47	72,6	#



spare wheels adaptable only for

BMW

Check product's authenticity on website www.wspitaly.com
 Verifiera produktens äkthet på www.wspitaly.com



Main

Wheel CODE: W678/AU78

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x19	5x120	45	72,6	#
8,0x19	5x120	52	72,6	#

UNDERCUT TECHNOLOGY



Hyper Silver

UNDERCUT TECHNOLOGY



Diamond Anthracite

Xenia

Wheel CODE: W677/BM77

Size	PCD	ET	Hub Ø	Diamond Anthracite	Hyper Silver
8,0x19	5x120	30	72,6	#	#
8,5x19	5x120	25	72,6	#	#
8,5x19	5x120	33	72,6	#	#
8,5x19	5x120	38	72,6	#	#
9,0x19	5x120	41	72,6	#	#
9,0x19	5x120	44	72,6	#	#
9,5x19	5x120	39	72,6	#	#
9,5x19	5x120	48	72,6	#	#
8,5x20	5x120	38	72,6	#	
10x20	5x120	51	72,6	#	

UNDERCUT TECHNOLOGY



Everest

Wheel CODE: W676/BM76

Size	PCD	ET	Hub Ø	Anthracite Polished
10x20	5x120	40	72,6	#
10x20	5x120	40	74,1	#
11x20	5x120	35	72,6	#
11x20	5x120	35	74,1	#
11x20	5x120	37	72,6	#
11x20	5x120	37	74,1	#



Matt Gun Metal



Silver

Basel M

Wheel CODE: W675/BM75

Size	PCD	ET	Hub Ø	Silver	Matt Gun Metal
7,5x18	5x120	45	72,6	#	#
7,5x18	5x120	47	72,6	#	#
7,5x18	5x120	49	72,6	#	#
8,0x18	5x120	34	72,6	#	#
8,5x18	5x120	37	72,6	#	#
8,5x18	5x120	52	72,6	#	#
8,5x19	5x120	29	72,6	#	#
8,5x19	5x120	33	72,6	#	#
9,5x19	5x120	23	72,6	#	#
9,5x19	5x120	37	72,6	#	#

spare wheels adaptable only for

BMW

Check product's authenticity on website www.wspitaly.com

Проверите аутентичност производа на www.wspitaly.com



Hyper Silver



Anthracite Polished

Aura

Wheel CODE: W674/BM74

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Silver
8,0x18	5x120	30	72,6	#	#
8,0x18	5x120	43	72,6	#	#
8,5x18	5x120	46	74,1	#	#
8,5x18	5x120	46	72,6	#	#
8,5x19	5x120	38	72,6	#	#
8,5x19	5x120	46	72,6	#	#
9,0x19	5x120	18	72,6	#	#
9,0x19	5x120	37	72,6	#	#
9,0x19	5x120	37	74,1	#	#
9,0x19	5x120	48	74,1	#	#
9,0x19	5x120	48	72,6	#	#
9,0x19	5x120	51	72,6	#	#
9,5x19	5x120	48	72,6	#	#
10x19	5x120	21	74,1	#	#
10x19	5x120	21	72,6	#	#
10x19	5x120	45	74,1	#	#
10x19	5x120	45	72,6	#	#
10x20	5x120	40	72,6	#	#
10x20	5x120	40	74,1	#	#
11x20	5x120	37	72,6	#	#
11x20	5x120	37	74,1	#	#

Neptune

Wheel CODE: W673/BM73

Size	PCD	ET	Hub Ø	Silver
8,0x18	5x120	20	72,6	#
8,0x18	5x120	30	72,6	#
9,0x18	5x120	32	72,6	#
9,0x18	5x120	44	72,6	#
8,5x19	5x120	25	72,6	#
8,5x19	5x120	33	72,6	#
9,5x19	5x120	39	72,6	#
8,5x20	5x120	25	72,6	#
8,5x20	5x120	33	72,6	#
9,0x20	5x120	41	72,6	#
9,0x20	5x120	42	72,6	#
9,0x20	5x120	44	72,6	#
10x20	5x120	41	72,6	#



UNDERCUT TECHNOLOGY
 -20"



Pandora

Wheel CODE: W672/BM72

Size	PCD	ET	Hub Ø	Anthracite Polished
10x20	5x120	40	72,6	#
10x20	5x120	40	74,1	#
11x20	5x120	37	72,6	#
11x20	5x120	37	74,1	#



Anthracite Polished

Venus

Wheel CODE: W671/BM71

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Anthracite
8,0x18	5x120	30	72,6	#	#
8,0x18	5x120	34	72,6	#	#
9,0x18	5x120	41	72,6	#	#
8,0x19	5x120	30	72,6	#	#
8,0x19	5x120	37	72,6	#	#
9,0x19	5x120	39	72,6	#	#
9,0x19	5x120	41	72,6	#	#
9,0x19	5x120	42	72,6	#	#



Hyper Anthracite

spare wheels adaptable only for

BMW

Luxor

Wheel CODE: W670/BM70

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x17	5x120	47	72,6	#
8,0x17	5x120	34	72,6	#
8,0x17	5x120	47	72,6	#
7,5x18	5x120	47	72,6	#
8,0x18	5x120	15	72,6	#
8,0x18	5x120	15	74,1	#
8,0x18	5x120	34	72,6	#
8,5x18	5x120	17	72,6	#
8,5x18	5x120	37	72,6	#
8,5x18	5x120	52	72,6	#
8,5x19	5x120	12	74,1	#
8,5x19	5x120	12	72,6	#
8,5x19	5x120	29	72,6	#
8,5x19	5x120	34	72,6	#
9,5x19	5x120	17	74,1	#
9,5x19	5x120	17	72,6	#
9,5x19	5x120	23	72,6	#
9,5x19	5x120	37	72,6	#
8,5x20	5x120	12	72,6	#
8,5x20	5x120	29	72,6	#
8,5x20	5x120	34	72,6	#
9,5x20	5x120	17	72,6	#
9,5x20	5x120	23	72,6	#
9,5x20	5x120	37	72,6	#

UNDERCUT TECHNOLOGY
-20°



Hotbird

Wheel CODE: W667/BM67

Size	PCD	ET	Hub Ø	Silver
7,5x17	5x120	32	72,6	#
7,5x17	5x120	35	72,6	#
8,0x18	5x120	30	72,6	#
8,0x18	5x120	43	72,6	#
8,5x18	5x120	35	72,6	#
8,5x18	5x120	35	74,1	#
9,0x18	5x120	41	72,6	#
9,0x19	5x120	18	72,6	#
9,0x19	5x120	48	74,1	#
9,0x19	5x120	48	72,6	#
10x19	5x120	21	72,6	#
10x19	5x120	45	72,6	#
10x19	5x120	45	74,1	#
10x20	5x120	40	72,6	#
10x20	5x120	40	74,1	#
11x20	5x120	37	72,6	#
11x20	5x120	37	74,1	#

Agropoli

Wheel CODE: W652/BM52



Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x17	5x120	15	72,6	#
8,0x17	5x120	34	72,6	#
8,0x18	5x120	15	72,6	#
8,0x18	5x120	15	74,1	#
8,0x18	5x120	34	72,6	#
8,5x19	5x120	16	72,6	#
8,5x19	5x120	16	74,1	#
8,5x19	5x120	34	72,6	#
9,5x19	5x120	19	72,6	#
9,5x19	5x120	19	74,1	#
9,5x19	5x120	34	72,6	#



Ricigliano

Wheel CODE: W668/BM68

Size	PCD	ET	Hub Ø	Silver	Dark Polished
8,0x18	5x120	20	72,6	#	#
8,0x18	5x120	20	74,1	#	#
8,0x18	5x120	34	72,6	#	#

Glazgo

Wheel CODE: W663/BM63

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x17	5x120	15	74,1	#
8,0x17	5x120	15	72,6	#
8,0x18	5x120	34	72,6	#



spare wheels adaptable only for

BMW

Check product's authenticity on website www.wspitaly.com

Verifica autenticitatea produsului pe www.wspitaly.com



Alicudi

Wheel CODE: W660/BM60

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x120	34	72,6	#
8,0x17	5x120	34	72,6	#
8,5x17	5x120	34	72,6	#
8,0x18	5x120	34	72,6	#
8,5x18	5x120	34	72,6	#

Ginevra

Wheel CODE: W651/BM51

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x120	34	72,6	#
8,0x17	5x120	34	72,6	#
8,0x18	5x120	34	72,6	#
8,5x18	5x120	37	72,6	#



Zurigo

Wheel CODE: W648/BM48

Size	PCD	ET	Hub Ø	Silver
8,0x17	5x120	20	74,1	#
8,0x17	5x120	34	72,6	#



Tristano

Wheel CODE: W36O2/CHO2

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x114,3	45	56,6	#

Cerere

Wheel CODE: W36O1/CHO1

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x114,3	44	56,6	#



spare wheels adaptable only for

Chrysler/Jeep

Check product's authenticity on website www.wspitaly.com

Verifica la autenticidad del producto en www.wspitaly.com



Ponza

Wheel CODE: W3801/CRO1

Size	PCD	ET	Hub Ø	Silver
8,0x20	5x127	40	71,6	#

Giove

Wheel CODE: W3802/CRO2

Size	PCD	ET	Hub Ø	Hyper Anthracite
8,0x20	5x127	56,4	71,6	#



Urano

Wheel CODE: W3803/CRO3

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x127	44,45	71,6	#



Yonne

Wheel CODE: W34O4/CTO4

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x18	5x114,3	38	67,1	#

Nimes

Wheel CODE: W34O3/CTO3

Size	PCD	ET	Hub Ø	Glossy Black Polished
6,0x16	4x108	23	65,1	#



Marseille

Wheel CODE: W34O2/CTO2

Size	PCD	ET	Hub Ø	Silver
6,5x17	4x108	26	65,1	#

spare wheels adaptable only for

Fiat

Check product's authenticity on website www.wspitaly.com
Vérifiez l'authenticité du produit en cliquant sur le site www.wspitaly.com



Ercolano

Wheel CODE: W167/FI67

Size	PCD	ET	Hub Ø	Glossy Black Polished
7,0x17	5x98	41	58,1	#

Bari

Wheel CODE: W165/FI65

Size	PCD	ET	Hub Ø	Glossy Black Polished
5,5x14	4x98	35	58,1	#
6,0x15	4x98	35	58,1	#





Grace

Wheel CODE: W162/F162

Size	PCD	ET	Hub Ø	Anthracite Polished
6,0x15	4x98	35	58,1	#
6,0x15	5x98	39	58,1	#

Evo

Wheel CODE: W163/F163

Size	PCD	ET	Hub Ø	Anthracite Polished
6,0x16	4x100	45	56,6	#
6,0x16	4x98	45	56,6	#



spare wheels adaptable only for

Fiat

Check product's authenticity on website www.wspitaly.com
ürünün özgünlüğünü www.wspitaly.com den kontrol ediniz

Erato

Wheel CODE: W160/FI60

Size	PCD	ET	Hub Ø	Matt Grey Polished
6,0x16	4x98	33	58,1	#
6,0x16	4x98	45	56,6	#
6,0x16	4x100	45	56,6	#



Como

Wheel CODE: W164/FI64

Size	PCD	ET	Hub Ø	Silver
7,0x17	4x98	31	58,1	#



Gubbio

Wheel CODE: W166/FI66

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x110	41	65,1	#



Verona

Wheel CODE: W152/FI52

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x110	36	65,1	#
6,5x16	5x110	37	65,1	#
7,0x17	5x110	41	65,1	#



Calabria

Wheel CODE: W153/FI53

Size	PCD	ET	Hub Ø	Silver
5,5x14	4x98	33	58,1	#
5,5x14	4x98	35	58,1	#
6,0x15	4x98	35	58,1	#
6,0x15	4x100	43	56,6	#
6,0x15	4x100	45	56,6	#



Rimini

Wheel CODE: W151/FI51

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x98	33	58,1	#
6,0x15	4x98	35	58,1	#
6,0x15	4x100	39	56,6	#
6,0x15	4x100	43	56,6	#

spare wheels adaptable only for

Fiat

Check product's authenticity on website www.wspitaly.com
Перевірте справжність продукту на www.wspitaly.com



Amburgo

Wheel CODE: W155/F155

Size	PCD	ET	Hub Ø	Silver
5,0x14	4x98	38	58,1	#



Ustica

Wheel CODE: W142/F142

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x98	33	58,1	#
6,0x15	4x98	35	58,1	#
6,0x15	4x100	38	56,6	#
6,0x15	4x100	43	56,6	#



Valencia

Wheel CODE: W150/F150

Size	PCD	ET	Hub Ø	Silver Polished
5,5x14	4x98	33	58,1	#
5,5x14	4x98	35	58,1	#
6,0x15	4x98	33	58,1	#
6,0x15	4x98	35	58,1	#
6,0x15	4x100	43	56,6	#
6,0x15	4x100	45	56,6	#
6,5x16	4x98	45	58,1	#
6,5x16	4x100	45	56,6	#



Lampedusa

Wheel CODE: W144/F144

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x98	33	58,1	#
6,0x15	4x100	38	56,6	#
6,0x15	4x100	38	56,6	#
6,0x16	4x100	38	56,6	#
6,0x16	4x100	45	56,6	#
6,0x16	5x98	36,5	58,1	#
6,5x17	4x100	46	56,6	#



New Delhi

Wheel CODE: W957/FO57

Size	PCD	ET	Hub Ø	Silver
7x17	5x108	50	63,4	#
7x17	5x108	52,5	63,4	#
7x17	5x108	55	63,4	#

Desna

Wheel CODE: W956/FO56

Size	PCD	ET	Hub Ø	Silver
7,5x18	5x108	52,5	63,4	#



spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com

Patikrinti produkto autentiškumą apie www.wspitaly.com

Ford



Anthracite Polished



Hyper Silver

Max - Mexico

Wheel CODE: W950/FO50

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Silver
6,5x16	5x108	50	63,4	#	#
7,5x17	5x108	52,5	63,4	#	#
7,5x17	5x108	55	63,4	#	#
8,0x18	5x108	55	63,4	#	#



Isidoro

Wheel CODE: W953/FO53

Size	PCD	ET	Hub Ø	Silver Polished
6,5x16	5x108	50	63,4	#
7x17	5x108	50	63,4	#
7x17	5x108	52,5	63,4	#



Kenia

Wheel CODE: W954/FO54

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x108	50	63,4	#



Perugia

Wheel CODE: W955/FO55

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x18	5x114,3	44	67,1	#

Nurnberg

Wheel CODE: W951/FO51

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x108	40	58,1	#
6,0x15	4x108	37,5	63,4	#
6,0x15	4x108	52,5	63,4	#



Siena

Wheel CODE: W952/FO52

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x108	52,5	63,4	#
6,5x16	4x108	52,5	63,4	#



spare wheels adaptable only for

Honda

Check product's authenticity on website www.wspitaly.com

לע רצומה לש תויטתומה תא אדוויל www.wspitaly.com



Gerda

Wheel CODE: W2411/HO11

Size	PCD	ET	Hub Ø	Anthracite Polished
6,5x17	5x114,3	45	64,1	#

Imperia

Wheel CODE: W2408/HO08

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x17	5x114,3	55	64,1	#



Bolzano

Wheel CODE: W2409/HO09

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x17	5x114,3	55	64,1	#



Nyla

Wheel CODE: W2410/HO10

Size	PCD	ET	Hub Ø	Hyper Anthracite
6,5x17	5x114,3	50	64,1	#



Hamada

Wheel CODE: W2407/HOO7

Size	PCD	ET	Hub Ø	Silver
7,5x17	5x114,3	45	64,1	#



Alen

Wheel CODE: W2405/HOO5

Size	PCD	ET	Hub Ø	Titanium
7,5x19	5x114,3	50	64,1	#



Ottawa

Wheel CODE: W2404/HOO4

Size	PCD	ET	Hub Ø	Silver
6,5x17	5x114,3	50	64,1	#
7,0x18	5x114,3	50	64,1	#

spare wheels adaptable only for

Hyundai

Check product's authenticity on website www.wspitaly.com

Проверьте аутентичность продукта на www.wspitaly.com



Ravenna

Wheel CODE: W3904/HYO4

Size	PCD	ET	Hub Ø	Silver
6,5x17	5x114,3	46	67,1	#

2015
2016

Check product's authenticity on website www.wspitaly.com
www.wspitaly.com から商品が本物かどうかを確認してください。

spare wheels adaptable only for

Infiniti



Sidney

Wheel CODE: W8801/INO1

Size	PCD	ET	Hub Ø	Anthracite Polished
8,5x19	5x114,3	50	66,1	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Lancia

Check product's authenticity on website www.wspitaly.com
查询辨别产品真伪请登入 www.wspitaly.com



Taranto

Wheel CODE: W318/LA18

Size	PCD	ET	Hub Ø	Anthracite Polished
6,0x15	4x98	30	58,1	#



Anthracite Polished



Diamond Black Polished



Diamond Black

Riga

Wheel CODE: W317 /LA17

Size	PCD	ET	Hub Ø	Diamond Black Polished	Anthracite Polished	Diamond Black
6,0x15	4x98	40	58,1	#	#	
6,5x16	4x98	40	58,1	#	#	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.



Black Polished



Silver Polished

Ilizia

Wheel CODE: W316/LA16

Size	PCD	ET	Hub Ø	Silver Polished	Black Polished
7,0x17	4x98	31	58,1	#	#



Anthracite Polished



Silver

Cilento

Wheel CODE: W315/LA15

Size	PCD	ET	Hub Ø	Silver	Anthracite Polished
6,0x15	4x98	40	58,1	#	#
6,5x16	4x98	40	58,1	#	#

Montevideo

Wheel CODE: W314/LA14

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x98	40	58,1	#



spare wheels adaptable only for

Land Rover

Check product's authenticity on website www.wspitaly.com
Überprüfen Sie die Authentizität des Produktes auf www.wspitaly.com



Ikebana

Wheel CODE: W2359/LR59

Size	PCD	ET	Hub Ø	Anthracite Polished
9,5x22	5x120	49	72,6	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.



Tritone

Wheel CODE: W2358/LR58


Size	PCD	ET	Hub Ø	Anthracite Polished
8,5X20	5x120	47	72,6	#
8,5X20	5x120	53	72,6	#
8,0X20	5x108	45	63,4	#

spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com

Patikrinti produkto autentiškumą apie www.wspitaly.com

Land Rover

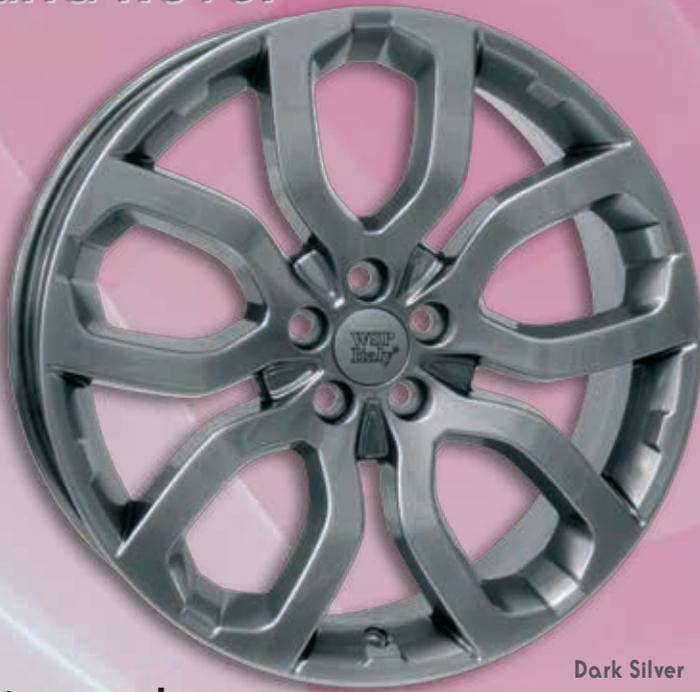

Dark Silver



Silver

Liverpool

Wheel CODE: W2357/LA57

Size	PCD	ET	Hub Ø	Dark Silver	Silver
8,0X18	5x108	45	63,4	#	#
8,0X20	5x108	45	63,4	#	#
8,5X20	5x120	47	72,6	#	#
8,5X20	5x120	53	72,6	#	#



Silver



Anthracite Polished

Ares

Wheel CODE: W2355 /LR55

Size	PCD	ET	Hub Ø	Anthracite Polished	Silver	Hyper Silver
9,0x19	5x120	53	72,6	#	#	#
9,5x20	5x120	53	72,6	#	#	#



Apollon

Wheel CODE: W2356/LR56

Size	PCD	ET	Hub Ø	Silver
8,0x18	5x120	53	72,6	#



Bristol

Wheel CODE: W2353/LR53

Size	PCD	ET	Hub Ø	Dark Silver
8,0x19	5x108	55	63,4	#



Anthracite
Polished



Silver



Dull Bronze

Mali

Wheel CODE: W2354 /LR54

Size	PCD	ET	Hub Ø	Anthracite Polished	Silver	Dull Bronze
7,0x16	5x165	33	114	#	#	
8,0x16	5x165	25	114	#	#	#

spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com
Autentsust kontrollida toote www.wspitaly.com

Lexus



Angel

Wheel CODE: W2654/LX54

Size	PCD	ET	Hub Ø	Hyper Silver
7,0x18	5x114,3	35	60,1	#



Arezzo

Wheel CODE: W2653/LX 53

Size	PCD	ET	Hub Ø	Silver
7,0x18	5x114,3	35	60,1	#



Chicago

Wheel CODE: W2650/LX50

Size	PCD	ET	Hub Ø	Hyper Anthracite
7,0x18	5x114,3	35	60,1	#
8,5x20	5x114,3	35	60,1	#



Siene

Wheel CODE: W1905/MAO5

Size	PCD	ET	Hub Ø	Hyper Silver
7,5x18	5x114,3	50	67,1	#



Hella

Wheel CODE: W1904/MAO4

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x114,3	60	67,1	#



Eclipse

Wheel CODE: W1906/MAO6

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x114,3	52,5	67,1	#



Magdeburg

Wheel CODE: W1903/MAO3

Size	PCD	ET	Hub Ø	Hyper Anthracite
6,5x16	4x100	50	54,1	#

spare wheels adaptable only for

Mercedes-Benz

Check product's authenticity on website www.wspitaly.com

Се потврди автентичноста на производот на www.wspitaly.com



Miyagi

Wheel CODE: W775/ME75

Size	PCD	ET	Hub Ø	Dull Black Polished
9,5x20	5x130	50	84,1	#

Ischia

Wheel CODE: W774/ME74

Size	PCD	ET	Hub Ø	Silver Polished
8,5x20	5x112	45	66,6	#
8,5x20	5x112	56	66,6	#
8,5x20	5x112	60	66,6	#
8,5x20	5x112	62	66,6	#
9,0x20	5x112	41	66,6	#
9,0x20	5x112	57	66,6	#
9,5x20	5x112	57	66,6	#
9,5x20	5x130	50	84,1	#



Shanghai

Wheel CODE: W773 / ME73

Size	PCD	ET	Hub Ø	Dull Black Polished	Dull Black
8,0x19	5x112	43,5	66,6	#	#
8,0x19	5x112	48	66,6	#	#
8,0x19	5x112	45	66,6	#	#
8,5x19	5x112	44	66,6	#	#
8,5x19	5x112	48	66,6	#	#
9,0x19	5x112	54	66,6	#	#
9,5x19	5x112	48	66,6	#	#



Apollo

Wheel CODE: W772 / ME72

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5X17	5x112	52,5	66,6	#
7,5X17	5x112	47	66,6	#
7,5X17	5x112	45	66,6	#
8,OX17	5x112	48	66,6	#
8,OX17	5x112	43	66,6	#
7,OX18	5x112	46	66,6	#
7,5X18	5x112	44	66,6	#
7,5X18	5x112	47	66,6	#
7,5X18	5x112	52	66,6	#
7,5X18	5x112	56	66,6	#

spare wheels adaptable only for

Mercedes-Benz

Check product's authenticity on website www.wspitaly.com
Pastikan keaslian produk di www.wspitaly.com



Enea

Wheel CODE: W771 / ME71

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x19	5x112	43,5	66,6	#
8,0x19	5x112	48	66,6	#
8,5x19	5x112	43	66,6	#
8,5x19	5x112	38	66,6	#
8,5x19	5x112	34,5	66,6	#
8,5x19	5x112	35,5	66,6	#
8,5x19	5x112	44	66,6	#
8,5x19	5x112	48	66,6	#
9,5x19	5x112	39	66,6	#
9,5x19	5x112	43	66,6	#
9,5x19	5x112	48	66,6	#
9,5x19	5x112	52	66,6	#



Hypnos

Wheel CODE: W761 / ME61

Size	PCD	ET	Hub Ø	Silver
7,5x18	5x112	47	66,6	#
8,5x20	5x112	43	66,6	#
8,5x20	5x112	45	66,6	#
9,5x20	5x112	57	66,6	#



Manila

Wheel CODE: W767 / ME67

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x112	56	66,6	#
7,5x17	5x112	47,5	66,6	#
8,5x17	5x112	52	66,6	#
8,0x18	5x112	45	66,6	#
8,0x18	5x112	48	66,6	#
8,0x18	5x112	50	66,6	#
8,0x18	5x112	60	66,6	#
8,5x19	5x112	60	66,6	#
9,5x19	5x112	56	66,6	#



Anthracite Polished



Hyper Silver



Dull Black

Nero

Wheel CODE: W766 / ME66

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Silver	Dull Black
8,5x19	5x112	56	66,6	#	#	#
8,5x19	5x112	60	66,6	#	#	#
8,5x19	5x112	62	66,6	#	#	#
10x20	5x112	46	66,6	#	#	#
10x21	5x112	46	66,6	#	#	#
10x21	5x112	56	66,6	#	#	#



Anthracite Polished



Hyper Silver

Vesuvio

Wheel CODE: W759 / ME59

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Silver
8,0x17	5x112	35	66,6	#	#
8,0x17	5x112	47	66,6	#	#
7,5x18	5x112	36	66,6	#	#
7,5x18	5x112	37	66,6	#	#
7,5x18	5x112	47	66,6	#	#
8,0x18	5x112	30	66,6	#	#
8,0x18	5x112	50	66,6	#	#
8,5x18	5x112	30	66,6	#	#
8,5x18	5x112	54	66,6	#	#
8,0x19	5x112	50	66,6	#	#
8,5x19	5x112	43	66,6	#	#
8,5x19	5x112	56	66,6	#	#
9,5x19	5x112	31	66,6	#	#
8,5x19	5x112	43	66,6	#	#
8,5x20	5x112	43	66,6	#	#
9,5x20	5x112	43	66,6	#	#

spare wheels adaptable only for

Mercedes-Benz

Check product's authenticity on website www.wspitaly.com
Egiaztatu produktuaren benetakotasuna www.wspitaly.com tan

Dione

Wheel CODE: W763/ME63

Size	PCD	ET	Hub Ø	Silver
7,5x17	5x112	36	66,6	#
7,5x17	5x112	47	66,6	#
8,5x17	5x112	30	66,6	#
8,5x17	5x112	38	66,6	#
8,5x17	5x112	48	66,6	#
8,5x17	5x112	58	66,6	#
7,5x18	5x112	36	66,6	#
7,5x18	5x112	47	66,6	#
8,5x18	5x112	30	66,6	#
8,5x18	5x112	48	66,6	#
8,5x18	5x112	58	66,6	#
9,0x18	5x112	39	66,6	#
9,0x18	5x112	54	66,6	#



Stromboli

Wheel CODE: W768/ME68

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x17	5x112	35	66,6	#
8,0x17	5x112	47	66,6	#
8,5x18	5x112	30	66,6	#
8,5x18	5x112	48	66,6	#



Matera

Wheel CODE: W760/ME60

Size	PCD	ET	Hub Ø	Silver Polished Lip
9,5x18	5x130	50	84,1	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

Capri

Wheel CODE: W758/ME58

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x17	5x112	35	66,6	#
8,0x17	5x112	47	66,6	#
8,0x18	5x112	30	66,6	#
8,0x18	5x112	50	66,6	#
8,5x18	5x112	30	66,6	#
8,5x18	5x112	54	66,6	#



Panama

Wheel CODE: W752/ME52

Size	PCD	ET	Hub Ø	Silver
6,5x15	5x112	37	66,6	#
6,5x16	5x112	47	66,6	#
6,5x16	5x112	49	66,6	#
7,0x17	5x112	49	66,6	#

spare wheels adaptable only for

Mercedes-Benz

Check product's authenticity on website www.wspitaly.com

Pastikan bahawa produk pada www.wspitaly.com

Erida

Wheel CODE: W765/ME65

Size	PCD	ET	Hub Ø	Silver
8,5x17	5x112	38	66,6	#
8,5x17	5x112	48	66,6	#



Mosca

Wheel CODE: W737/ME37

Size	PCD	ET	Hub Ø	Silver
8,0x17	5x112	35	66,6	#
8,0x17	5x112	57	66,6	#
8,0x18	5x112	35	66,6	#
8,0x18	5x112	60	66,6	#
8,0x19	5x112	60	66,6	#



Beijing

Wheel CODE: W1658/M158

Size	PCD	ET	Hub Ø	Glossy Black Polished
7,0x18	5x112	54	66,6	#

St. Petersburg

Wheel CODE: W1657/M157

Size	PCD	ET	Hub Ø	Glossy Black
7,0x17	5x112	54	66,6	#



spare wheels adaptable only for

Mini

Check product's authenticity on website www.wspitaly.com

Verifique a autenticidade do produto em www.wspitaly.com



Bikini

Wheel CODE: W1656/MI56

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x18	5x120	52	72,6	#

Troia

Wheel CODE: W1655/MI55

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x17	4x100	48	56,1	#



Check product's authenticity on website www.wspitaly.com
Проверьте аутентичность продукта на www.wspitaly.com

spare wheels adaptable only for

Mini



Dull Black



Dull Black Polished

Amstel

Wheel CODE: W1654/MI54

Size	PCD	ET	Hub Ø	Dull Black	Dull Black Polished
7,5x19	5x120	52	72,6	#	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Mini

Check product's authenticity on website www.wspitaly.com
Се потврди автентичноста на производот на www.wspitaly.com



Glossy Black



Glossy Black Polished

Rivers

Wheel CODE: W1653/M153

Size	PCD	ET	Hub Ø	Glossy Black	Glossy Black Polished
7,0x17	4x100	48	56,1	#	#
7,0x18	4x100	52	56,1	#	#



Lim. Edition

Wheel CODE: W1651/MI51

Size	PCD	ET	Hub Ø	Dull Black Polished
7,0x17	4x100	48	56,1	#
7,0x18	4x100	52	56,1	#



Diamond Black



Silver



White

Elena

Wheel CODE: W1650 /MI50

Size	PCD	ET	Hub Ø	Silver	Diamond Black	White
6,5x16	4x100	48	56,1	#	#	#
7,0x17	4x100	48	56,1	#	#	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
 The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Mitsubishi

Check product's authenticity on website www.wspitaly.com
Vérifie l'authenticité du produit en cliquant sur le site www.wspitaly.com



Pajero

Wheel CODE: W3001/MTO1

Size	PCD	ET	Hub Ø	Hyper Silver	Chrome
7,5x18	6x139,7	46	67,1	#	
*9,5x20	6x139,7	50	67,1	#	#

*Not available for shipment EU Market

Poseidone

Wheel CODE: W3004/MTO4

Size	PCD	ET	Hub Ø	Silver Polished
8,0x19	5x114,3	38	67,1	#



Bolton

Wheel CODE: W3002/MTO2

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x114,3	38	67,1	#



Vulture 2+

Wheel CODE: W1855/NI55

Size	PCD	ET	Hub Ø	Anthracite Polished
6,5x17	5x114,3	40	66,1	#



Murano

Wheel CODE: W1854/NI54

Size	PCD	ET	Hub Ø	Silver
7,5x18	5x114,3	35	66,1	#



Qashqai

Wheel CODE: W1850/NI50

Size	PCD	ET	Hub Ø	Silver
6,5x17	5x114,3	40	66,1	#



Tiida

Wheel CODE: W1852/NI52

Size	PCD	ET	Hub Ø	Silver
5,5x15	4x100	40	54,1	#

spare wheels adaptable only for

Opel

Check product's authenticity on website www.wspitaly.com
Provjerite vjerodostojnost proizvoda na stranici www.wspitaly.com



Zefiro

Wheel CODE: W2510/OPIO

Size	PCD	ET	Hub Ø	Matt Gun Metal Polished
7,5x18	5x110	37	65,1	#
7,5x18	5x110	41	65,1	#
7,5x18	5x115	41	70,2	#
7,5x18	5x115	42	70,2	#
7,0x18	5x105	38	56,6	#

Astra

Wheel CODE: W2507/OPO7

Size	PCD	ET	Hub Ø	Hyper Silver
7,0x17	5x105	42	56,6	#
7,0x17	5x115	44	70,2	#





Mercury

Wheel CODE: W2506/OPO6

Size	PCD	ET	Hub Ø	Hyper Anthracite
8,0x18	5x115	46	70,2	#
8,0x18	5x120	42	67,1	#
8,0x19	5x115	46	70,2	#
8,5x19	5x120	45	67,1	#

Moon

Wheel CODE: W2504/OPO4

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x18	5x105	40	56,6	#
8,0x18	5x110	43	65,1	#
8,0x18	5x115	46	70,2	#
8,0x19	5x105	40	56,6	#
8,0x19	5x110	43	65,1	#
8,0x19	5x115	46	70,2	#



Opel



Urbino

Wheel CODE: W2508/OPO8

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x110	41	65,1	#



Arena

Wheel CODE: W2509/OPO9

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x110	37	65,1	#



Cariddi**

Wheel CODE: W2505/OPO5

Size	PCD	ET	Hub Ø	Silver
6,5x16	4x100	37	56,6	#



Strike**

Wheel CODE: W2502/OPO2

Size	PCD	ET	Hub Ø	Silver
6,5x15	5x110	37	56,1	#
6,5x16	5x110	37	56,1	#



Dubai

Wheel CODE: W855/PE55

Size	PCD	ET	Hub Ø	Matt Gun Metal Polished
7,5x17	5x108	44	65,1	#
7,5x17	5x108	47	65,1	#

Lione

Wheel CODE: W854/PE54

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x108	42	65,1	#
7,0x16	5x108	44	65,1	#



spare wheels adaptable only for

Peugeot

Check product's authenticity on website www.wspitaly.com

Проверите аутентичност производа на www.wspitaly.com



Le Mans

Wheel CODE: W853/PE53

Size	PCD	ET	Hub Ø	Hyper Silver
8,5x18	5x108	27	65,1	#



Palermo

Wheel CODE: W851/PE51

Size	PCD	ET	Hub Ø	Silver
6,5x16	4x108	20	65,1	#



Lyon**

Wheel CODE: W850/PE50

Size	PCD	ET	Hub Ø	Silver
6,5x15	4x108	28	65,1	#
7,0x17	4x108	28	65,1	#



Paris**

Wheel CODE: W813/PE13

Size	PCD	ET	Hub Ø	Silver
6,5x16	4x108	28	65,1	#

Check product's authenticity on website www.wspitaly.com
Ověřit pravost výrobku na www.wspitaly.com

spare wheels adaptable only for

Porsche



**FLOW FORM
TECHNOLOGY**

Tokyo***

Wheel CODE: W1057/PO57

Size	PCD	ET	Hub Ø	Anthracite Polished
9x21	5x112	26	66,6	#
10x21	5x112	19	66,6	#

***Not available for shipment German Market

2015
2016

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Porsche

Check product's authenticity on website www.wspitaly.com
Verifica la autenticidad del producto en www.wspitaly.com



**FLOW FORM
TECHNOLOGY**

Fuji***

Wheel CODE: W1056/PO56

Size	PCD	ET	Hub Ø	Anthracite Polished
9x20	5x112	26	66,6	#
10,0x20	5x112	19	66,6	#

***Not available for shipment German Market

2015
2016

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.



**FLOW FORM
TECHNOLOGY**

Legend***

Wheel CODE: W1055/PO55

Size	PCD	ET	Hub Ø	Anthracite Polished
8,5x20	5x130	51	71,6	#
11,0x20	5x130	52	71,6	#
11,0x20	5x130	56	71,6	#
11,0x20	5x130	70	71,6	#

***Not available for shipment German Market

2015
2016

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com

Hitelességének vizsgálata a termék a www.wspitaly.com


Porsche

UNDERCUT TECHNOLOGY



FLOW FORM TECHNOLOGY

UNDERCUT TECHNOLOGY

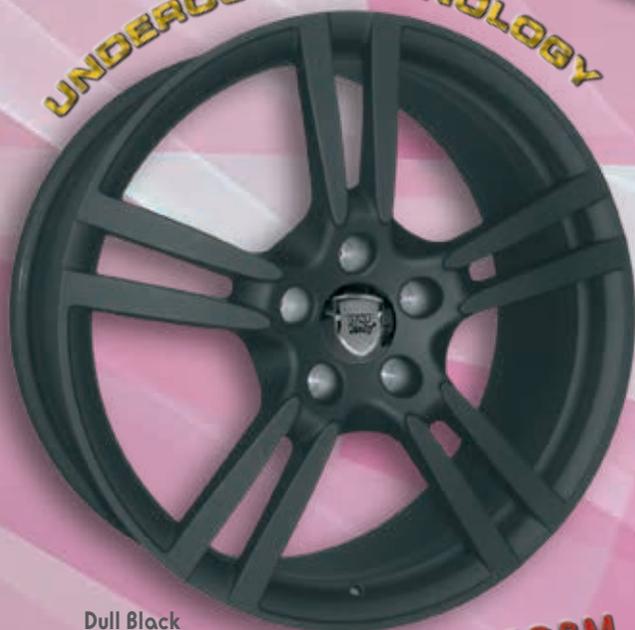

Dull Black

Dull Black
Polished

UNDERCUT TECHNOLOGY



Anthracite Polished

FLOW FORM TECHNOLOGY

FLOW FORM TECHNOLOGY

Saturn***

Wheel CODE: W1054/PO54

Size	PCD	ET	Hub Ø	Dull Black	Dull Black Polished	Anthracite Polished
8x18	5x130	50	71,6			#
10x18	5x130	47	71,6			#
11x18	5x130	63	71,6			#
8,5x19	5x130	55	71,6			#
9,0x19	5x130	60	71,6			#
10x19	5x130	42	71,6			#
10x19	5x130	61	71,6			#

Size	PCD	ET	Hub Ø	Dull Black	Dull Black Polished	Anthracite Polished
11x19	5x130	51	71,6			#
11,5x19	5x130	67	71,6			#
9,0x20	5x130	60	71,6	#	#	#
9,5x20	5x130	65	71,6	#	#	#
11x20	5x130	68	71,6	#	#	#
10x21	5x130	45	71,6	#	#	#
10x21	5x130	50	71,6	#	#	#

***Not available for shipment German Market



Dull Black

**FLOW FORM
TECHNOLOGY**



Silver

**FLOW FORM
TECHNOLOGY**

Tornado***

Wheel CODE: W1051/PO51

Size	PCD	ET	Hub Ø	Silver	Dull Black
9,0x19	5x130	60	71,6	#	#
9,0x20	5x130	60	71,6	#	#
10x21	5x130	50	71,6	#	#

***Not available for shipment German Market

spare wheels adaptable only for

Porsche

Check product's authenticity on website www.wspitaly.com

Verifica autenticitatea produsului pe www.wspitaly.com



Philadelphia***

Wheel CODE: W1050/PO50

Size	PCD	ET	Hub Ø	Anthracite Polished
8,5x19	5x130	51	71,6	#
10x19	5x130	44	71,6	#
11x19	5x130	50	71,6	#
8,5x20	5x130	51	71,6	#
11x20	5x130	52	71,6	#
12x20	5x130	47	71,6	#

***Not available for shipment German Market

Porsche



Silver

**FLOW FORM
TECHNOLOGY**



Gold Rice

**FLOW FORM
TECHNOLOGY**



Glossy Black

**FLOW FORM
TECHNOLOGY**



White

**FLOW FORM
TECHNOLOGY**

Corsair***

Wheel CODE: W1052/PO52

Size	PCD	ET	Hub Ø	Silver	White	Gold Rice	Glossy Black
8,5x19	5x130	53	71,6	#	#	#	#
12x19	5x130	51	71,6	#	#	#	#
12x19	5x130	67	71,6	#	#	#	#

***Not available for shipment German Market

spare wheels adaptable only for

Renault

Check product's authenticity on website www.wspitaly.com
De authenticiteit van het product op www.wspitaly.com



Hestia

Wheel CODE: W3305/REO5

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x114,3	49	66,1	#

Assen**

Wheel CODE: W3303/REO3

Size	PCD	ET	Hub Ø	Hyper Silver
7,0x17	4x100	38	60,1	#



Nantes**

Wheel CODE: W3304/REO4

Size	PCD	ET	Hub Ø	Silver
6,0x15	4x100	40	60,1	#



Orleans**

Wheel CODE: W3302/REO2

Size	PCD	ET	Hub Ø	Silver
6,5x16	4x100	49	60,1	#





Nemo

Wheel CODE: W1152/SA52

Size	PCD	ET	Hub Ø	Glossy Black Polished
8,5x19	5x120	45	67,1	#

Terni**

Wheel CODE: W1151/SA51

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x110	41	65,1	#



spare wheels adaptable only for

Seat

Check product's authenticity on website www.wspitaly.com
Verifisere ektheten av produktet på www.wspitaly.com



Xavier

Wheel CODE: W1301/ST01

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x100	43	57,1	#

spare wheels adaptable only for

Suzuki

Sirius**

Wheel CODE: W2850/SZ50

Size	PCD	ET	Hub Ø	Silver Pol.
6,5x17	5x114,3	45	60,1	#





Belgorod

Wheel CODE: W3503/SKO3

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x112	45	57,1	#
7,0x17	5x112	49	57,1	#

Kiev

Wheel CODE: W3504/SKO4

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x18	5x112	46	57,1	#
7,5x18	5x112	51	57,1	#





Atena

Wheel CODE: W27O5/SUO5

Size	PCD	ET	Hub Ø	Silver Polished
6,5x16	5x100	48	56,1	#



Dora

Wheel CODE: W27O4/SUO4

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x100	55	56,1	#



Orion

Wheel CODE: W27O3/SUO3

Size	PCD	ET	Hub Ø	Silver Polished
6,5x16	5x100	48	56,1	#



Venere

Wheel CODE: W1765/TO65

Size	PCD	ET	Hub Ø	Anthracite Polished	Hyper Silver
7,5x18	6x139,7	25	106,1	#	#
8,5x20*	6x139,7	40	106,1	#	#
9,5x20*	6x139,7	20	106,1	#	#

Era

Wheel CODE: W1766/TO66

Size	PCD	ET	Hub Ø	Silver
7,5x18	6x139,7	25	106,1	#



spare wheels adaptable only for

Toyota

Check product's authenticity on website www.wspitaly.com
Autentsust kontrollida toote www.wspitaly.com



Livorno

Wheel CODE: W1767/TO67

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x100	39	54,1	#

Parma

Wheel CODE: W1768/TO68

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x100	39	54,1	#





Vicenza

Wheel CODE: W1769/TO69

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x114,3	45	60,1	#

Brasil

Wheel CODE: W1759/TO59

Size	PCD	ET	Hub Ø	Silver	Hyper Silver
8,0x18	5x150	60	110,1	#	
8,5x20	5x150	60	110,1	#	



spare wheels adaptable only for

Toyota

Check product's authenticity on website www.wspitaly.com

Pastikan keaslian produk di www.wspitaly.com



L'Aquila

Wheel CODE: W1770/TO70

Size	PCD	ET	Hub Ø	Silver Polished
7,5x19	5x114,3	35	60,1	#

Jaddah

Wheel CODE: W1758/TO58

Size	PCD	ET	Hub Ø	Silver
8,0x17	5x150	60	110,1	#





Scario

Wheel CODE: W1764/TO64

Size	PCD	ET	Hub Ø	Silver
7,5x18	6x139,7	25	106,1	#

Aomori

Wheel CODE: W1761/TO61

Size	PCD	ET	Hub Ø	Silver
7,0x15	6x139,7	30	106,1	#



spare wheels adaptable only for

Toyota

Check product's authenticity on website www.wspitaly.com
Egiaztatu produktuaren benetakotasuna www.wspitaly.com tan



Silver Polished

Yokohama

Wheel CODE: W1707/TO07

Size	PCD	ET	Hub Ø	Hyper Silver	Silver Pol.
7,5x17	6x139,7	30	106,1	#	#
9,5x20	6x139,7	30	106,1	#	#

Sapporo

Wheel CODE: W1760/TO60

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x16	6x139,7	30	106,1	#





Catania

Wheel CODE: W1750/TO50

Size	PCD	ET	Hub Ø	Silver Polished	Silver
7,0x17	5x114,3	45	60,1	#	#
7,5x18	5x114,3	45	60,1	#	#

Cesare

Wheel CODE: W1751/TO51

Size	PCD	ET	Hub Ø	Anthracite Polished
8,0x16	5x150	0	110,1	#



spare wheels adaptable only for

Toyota

Check product's authenticity on website www.wspitaly.com

Pastikan bahawa produk pada www.wspitaly.com



Nemuro

Wheel CODE: W1762/TO62

Size	PCD	ET	Hub Ø	Silver
6,0x15	5x100	33	54,1	#

Nefertiti

Wheel CODE: W1756/TO56

Size	PCD	ET	Hub Ø	Silver
7,0x17	5x114,3	45	60,1	#





Ueda

Wheel CODE: W1763/TO63

Size	PCD	ET	Hub Ø	Silver
5,5x15	4x100	45	54,1	#

Ramagnano

Wheel CODE: W1755/TO55

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x114,3	45	60,1	#



Tripoli**

Wheel CODE: W1754/TO54

Size	PCD	ET	Hub Ø	Silver	Hyper Black**
6,5x16	5x114,3	45	60,1	#	#



spare wheels adaptable only for

Volkswagen

Check product's authenticity on website www.wspitaly.com

Се потврди автентичноста на производот на www.wspitaly.com



Xiamen

Wheel CODE: W467/YO67

Size	PCD	ET	Hub Ø	Matt Silver
7,0x17	5x112	33	57,1	#
7,0x17	5x112	39	57,1	#
7,0x17	5x112	42	57,1	#
7,0x17	5x112	43	57,1	#
7,0x17	5x112	47	57,1	#
7,0x17	5x112	49	57,1	#
7,0x17	5x112	54	57,1	#



Salt Lake

Wheel CODE: W466/VO66

Size	PCD	ET	Hub Ø	Silver
8,5x19	5x130	59	71,6	#



Laceno

Wheel CODE: W465/VO65

Size	PCD	ET	Hub Ø	Silver
7,5x18	5x112	51	57,1	#
7,5x19	5x112	51	57,1	#



Glossy Black



Silver

Nisida

Wheel CODE: W464/VO64

Size	PCD	ET	Hub Ø	Glossy Black	Silver
8,0x19	5x112	50	57,1	#	#
8,0x19	5x112	48	57,1	#	#
8,0x19	5x112	44	57,1	#	#
8,0x19	5x112	41	57,1	#	#

spare wheels adaptable only for

Volkswagen

Check product's authenticity on website www.wspitaly.com

Перевірте справжність продукту на www.wspitaly.com



Hyper Silver



Anthracite Polished

Cross

Wheel CODE: W463/VO63

Size	PCD	ET	Hub Ø	Hyper Silver	Anthracite Polished
7,0x16	5x100	46	57,1	#	#



Altair

Wheel CODE: W462/VO62

Size	PCD	ET	Hub Ø	Glossy Black Polished
7,5x17	5x112	47	57,1	#
7,5x17	5x112	49	57,1	#

Check product's authenticity on website www.wspitaly.com
www.wspitaly.com から商品が本物かどうかを確認してください。

spare wheels adaptable only for

Volkswagen



Ermes

Wheel CODE: W461/VO61

Size	PCD	ET	Hub Ø	Anthracite Polished
6,5x16	5x112	39	57,1	#
6,5x16	5x112	42	57,1	#
6,5x16	5x112	46	57,1	#
6,5x16	5x112	50	57,1	#
7,0x17	5x112	33	57,1	#
7,0x17	5x112	39	57,1	#
7,0x17	5x112	42	57,1	#
7,0x17	5x112	43	57,1	#
7,0x17	5x112	54	57,1	#
7,5x17	5x112	47	57,1	#



Silver Polished



Dull Black Polished

Rheia

Wheel CODE: W460/VO60

Size	PCD	ET	Hub Ø	Silver Polished	Dull Black Polished
6,5x16	5x112	33	57,1	#	
6,5x16	5x112	42	57,1	#	
6,5x16	5x112	50	57,1	#	#
7,5x17	5x112	47	57,1	#	
7,5x17	5x112	49	57,1	#	
7,5x17	5x112	51	57,1	#	
7,5x17	5x112	54	57,1	#	#

I nomi usati indicano specificamente i veicoli o i costruttori allo scopo di descrivere la destinazione del prodotto
 The names used indicate specifically vehicles or car manufacturers, just in order to describe the product application.

spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com

查询辨别产品真伪请登入 www.wspitaly.com

Volkswagen



Silver Polished Lip



Matt Gun Metal

Sahara

Wheel CODE: W459/VO59

Size	PCD	ET	Hub Ø	Silver	Silver Polished Lip	Matt Gun Metal
10x21	5x130	50	71,6	#	#	#



Silver

Rostock

Wheel CODE: W457/VO57

Size	PCD	ET	Hub Ø	Silver	Dull Black
7,5x18	5x112	35	57,1	#	#
7,5x18	5x112	49	57,1	#	#
7,5x18	5x112	51	57,1	#	#
8,0x18	5x112	30	57,1	#	#
8,0x18	5x112	40	57,1	#	#
8,0x18	5x112	41	57,1	#	#
8,0x19	5x112	41	57,1	#	#
8,0x19	5x112	44	57,1	#	#



Dull Black



Ginostra

Wheel CODE: W456/VO56

Size	PCD	ET	Hub Ø	Silver
6,5x16	5x112	39	57,1	#
6,5x16	5x112	42	57,1	#
7,5x17	5x112	47	57,1	#
7,5x17	5x112	49	57,1	#

Vulcano

Wheel CODE: W455/VO55

Size	PCD	ET	Hub Ø	Silver Polished
9,0x19	5x112	33	57,1	#



spare wheels adaptable only for

Volkswagen

Check product's authenticity on website www.wspitaly.com

Verifique a autenticidade do produto em www.wspitaly.com



Riace

Wheel CODE: W454/VO54

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x17	5x112	47	57,1	#
7,5x17	5x112	49	57,1	#
8,0x18	5x112	40	57,1	#
8,0x18	5x112	41	57,1	#
8,0x18	5x112	44	57,1	#



Linz

Wheel CODE: W453/VO53

Size	PCD	ET	Hub Ø	Silver Polished Lip
7,5x17	5x112	47	57,1	.



Silver



Silver Polished

Dhaka

Wheel CODE: W451/VO51

Size	PCD	ET	Hub Ø	Silver Polished	Silver
8,0x18	5x112	30	57,1		#
8,0x18	5x120	50	65,1		#
8,0x18	5x130	53	71,6		#
8,0x18	5x120	57	65,1	#	#
8,0x18	5x130	57	71,6	#	#
9,0x20	5x120	60	65,1	#	#
9,0x20	5x130	57	71,6		#
9,0x20	5x130	60	71,6	#	#



Anthracite Polished



Silver Polished



Glossy Black Lip Polished

Ciprus

Wheel CODE: W444/VO44

Size	PCD	ET	Hub Ø	Anthracite Polished	Silver Polished	Glossy Black Lip Polished
7,0x16	5x112	45	57,1	#		
7,0x16	5x100	46	57,1	#		
7,0x17	5x100	38	57,1	#		
7,0x17	5x112	42	57,1	#		#
7,5x18	5x112	47	57,1	#	#	#



Sparta

Wheel CODE: W442/VO42

Size	PCD	ET	Hub Ø	Silver Polished
7,0x16	5x112	45	57,1	#
7,5x17	5x112	47	57,1	#

Dresden

Wheel CODE: W450/VO50

Size	PCD	ET	Hub Ø	Silver
7,0x16	5x112	42	57,1	#
7,5x17	5x112	45	57,1	#
7,5x17	5x112	47	57,1	#
8,0x18	5x112	45	57,1	#



spare wheels adaptable only for

Volkswagen

Check product's authenticity on website www.wspitaly.com
Verifica la autenticidad del producto en www.wspitaly.com



Albanella

Wheel CODE: W440/VO40

Size	PCD	ET	Hub Ø	Silver	Silver Polished
8,0x18	5x120	45	65,1	#	#
8,0x18	5x130	45	71,6	#	#
9,0x19	5x120	60	65,1	#	#
9,0x19	5x130	60	71,6	#	#

Sorrento

Wheel CODE: W430/VO30

Size	PCD	ET	Hub Ø	Anthracite Polished
7,0x16	5x100	38	57,1	#



2016



Napoli

Wheel CODE: W1258/VL58

Size	PCD	ET	Hub Ø	Silver	Anthracite Polished
7,5x18	5x108	52,5	63,4	#	#



Silver



Anthracite Polished

Nord

Wheel CODE: W1257/VL57

Size	PCD	ET	Hub Ø	Silver	Anthracite Polished
7,5x18	5x108	52,5	63,4	#	#

spare wheels adaptable only for

Check product's authenticity on website www.wspitaly.com

Проверьте аутентичность продукта на www.wspitaly.com

Volvo



Baltica

Wheel CODE: W1256/VL56

Size	PCD	ET	Hub Ø	Matt Silver
7,0x17	5x108	50	63,4	#
7,5x17	5x108	49	67,1	#
7,5x17	5x108	55	63,4	#



Night

Wheel CODE: W1255/VL55

Size	PCD	ET	Hub Ø	Anthracite Polished
7,5x18	5x108	52,5	63,4	#
7,5x18	5x108	52,5	65,1	#



Anthracite Polished

Lima

Wheel CODE: W1254/VL54

Size	PCD	ET	Hub Ø	Silver	Anthracite Polished
8,0x19	5x108	49	63,4	#	#
8,0x19	5x108	49	65,1	#	#
8,0x19	5x108	49	67,1	#	#



Silver

IL NOSTRO NOME LA NOSTRA GARANZIA: GLI UNICI AL MONDO

WSP ITALY è l'unica azienda al mondo nel settore delle ruote sostitutive replica ad apporre sui propri prodotti e sulle loro confezioni il proprio nome e marchio di fabbrica a garanzia del prodotto e dell'acquirente finale, così da assicurare la totale tracciabilità della singola ruota. Tale trasparenza nei confronti del consumatore è unica in un settore invaso da replica infedeli che neanche possono definirsi ruote sostitutive per misure e colori.

OUR NAME OUR GUARANTEE: THE ONLY IN THE WORLD

WSP ITALY is the only company in the world in the "pattern part replacement wheels" field that affixes and engraves its trademark on its products and packaging as warranty for the product and for the final customer, in order to make the single wheel completely traceable. This transparency to the final consumer is unique in the replacement replica wheel field which is invaded by unfaithful products which cannot even be defined replacement wheels for sizes and colors.

NUESTRO NOMBRE NUESTRA GARANTÍA: EL ÚNICO EN EL MUNDO

WSP Italy es la única empresa en el mundo en el ámbito de las llantas de recambio adaptables para poner en sus productos y sus envases el nombre y la marca como garantía del producto y del comprador final, así como para garantizar la trazabilidad integral de la llanta individual. Esta transparencia para el consumidor es única en un sector inundado de adaptables infieles que ni siquiera se pueden definir llantas de sustitución.

НАШЕ ИМЯ – НАША ГАРАНТИЯ: ЕДИНСТВЕННАЯ В МИРЕ

WSP ITALY является единственной компанией в мире в области автомобильных заменяемых (совместимых) колес (реплика), которая указывает свою фабричную марку как на продукции, так и на упаковке, предоставляя таким образом гарантию для конечного потребителя и серийный номер для отслеживания каждого колеса. Эта прозрачность перед каждым потребителем уникальна в своем роде и резко отличается от другой продукции в секторе реплики, которые нельзя определить как совместимую запасную часть.

AUTENTICITÀ ED ATTIVAZIONE DELLA GARANZIA

La forza del marchio WSP Italy, simbolo di qualità e affidabilità nel proprio settore, ha determinato i maldestri tentativi di imitazione da parte della concorrenza quando non addirittura la contraffazione dei nostri prodotti. Allo scopo di tutelare i consumatori, il nostro marchio ed i nostri prodotti sul nostro sito www.wspitaly.com in una apposita sezione è oggi possibile registrare il prodotto ed attivare la garanzia con la contestuale conferma della sua autenticità (vedi pagina 109 Identificazione e Tracciabilità).

AUTHENTICITY AND ACTIVATION OF THE WARRANTY.

The strength of WSP Italy trademark, symbol of quality and reliability in its field, has led our competitors to clumsy attempts of imitation and in some circumstances even to the counterfeiting of our products. In order to protect the consumers, our brand and our products, it is now possible to register the purchased product and to activate the warranty with the related confirmation of its authenticity on our web site www.wspitaly.com, in a special section (see page 109 Identification and traceability).

AUTENTICIDAD Y ACTIVACIÓN DE LA GARANTÍA

La fuerza de la marca WSP Italy, símbolo de calidad y fiabilidad en su campo, ha llevado a nuestros competidores en los torpes intentos de imitación, o incluso la falsificación de nuestros productos. Con el fin de proteger a los consumidores, nuestra marca y nuestros productos es ahora posible, registrar y activar la garantía del producto con la confirmación contextual de su autenticidad en nuestro sitio www.wspitaly.com, en una sección especial (consulte la página 109 Identificación y Trazabilidad).

ПРОВЕРКА ПОДЛИННОСТИ И АКТИВАЦИЯ ГАРАНТИИ

Сила торговой марки WSP Italy как символ качества и надежности в своем секторе, ранее предотвращала попытки имитации, а в отдельных случаях и подделки нашей продукции конкурентами. В целях защиты наших потребителей, а также торговой марки и продукции, на сайте www.wspitaly.com в секции «Проверка подлинности и активация гарантии» Вы можете по серийному номеру зарегистрировать продукт и активировать гарантию, тем самым проверив его подлинность (см. стр. 109)

VERIFICATION OF PRODUCT'S AUTHENTICITY / VERIFICA AUTENTICITÀ DEL PRODOTTO



WARNING

The original product WSP Italy is produced using a mould with our mark engraved inside. If the mark isn't engraved in the wheel, please send an e-mail to the following address: info@wspitaly.com.

ATTENZIONE

Il prodotto originale WSP Italy reca uno stampo con il nostro marchio. Qualora lo stampo, che appare chiaramente nella foto, non dovesse essere presente sul prodotto vi invitiamo a segnalare l'anomalia scrivendo a: info@wspitaly.com.

ATENCIÓN

El producto original WSP Italy lleva un molde con nuestra marca. En el caso de que la marca que aparece claramente en la foto no está presente en el producto, os pedimos de señalar esta anomalía por escrito a: info@wspitaly.com.

ВНИМАНИЕ

Оригинальный продукт WSP Italy всегда маркирован нашей торговой маркой. Если знак качества отсутствует на продукте представленном как WSP Italy – просим сообщить нам по адресу: info@wspitaly.com.

MARCHIATURE

I cerchi WSP Italy presentano la punzonatura di tutte le informazioni tecniche previste dalla norma, del marchio nonché dell'indicazione NOT O.E.M. (NOT ORIGINAL EQUIPMENT MANUFACTURING) o ruota ricambio compatibile a specificare che trattasi di ruota di ricambio proveniente da costruttore indipendente

MARKING

The alloy wheels WSP Italy are engraved on the inside with all the technical information provided for by the law, like the trademark, the NOT O.E.M. indication (NOT ORIGINAL EQUIPMENT MANUFACTURING) or compatible spare wheel in order to specify that these wheels are not original spare wheels produced by an independent manufacturer.

IDENTIFICAZIONE, TRACCIABILITÀ E VERIFICA AUTENTICITÀ DEL PRODOTTO

Per identificare e tracciare i prodotti a brand WSP Italy® sulla scatola di imballaggio (e prossimamente anche direttamente sul prodotto) trovate applicato un numero seriale ed una chiave di attivazione che ha il duplice scopo di chiave antifalsificazione (all'indirizzo http://www.wspitaly.com/verifica/controllo_codice_attivazione.php si può verificare anche l'autenticità del prodotto, inserendo seriale e chiave di attivazione) e di attivazione della garanzia.




IDENTIFICATION, TRACEABILITY AND AUTHENTICITY VERIFICATION OF THE PRODUCT

To identify and trace the products in WSP Italy® brand on the box packaging (and soon on the product) is applied a serial number and an activation key that serves the dual purpose of anti-counterfeiting key (at http://www.wspitaly.com/test/controllo_codice_attivazione.php you can also check the authenticity of the product, entering the serial number and activation key) and warranty activation.


THE FIVE STEPS FOR IDENTIFICATION AND REGISTRATION OF WSP ITALY WHEELS

ON THE WEB: CAR CONFIGURATOR


www.wspitaly.it
www.wspitaly.com

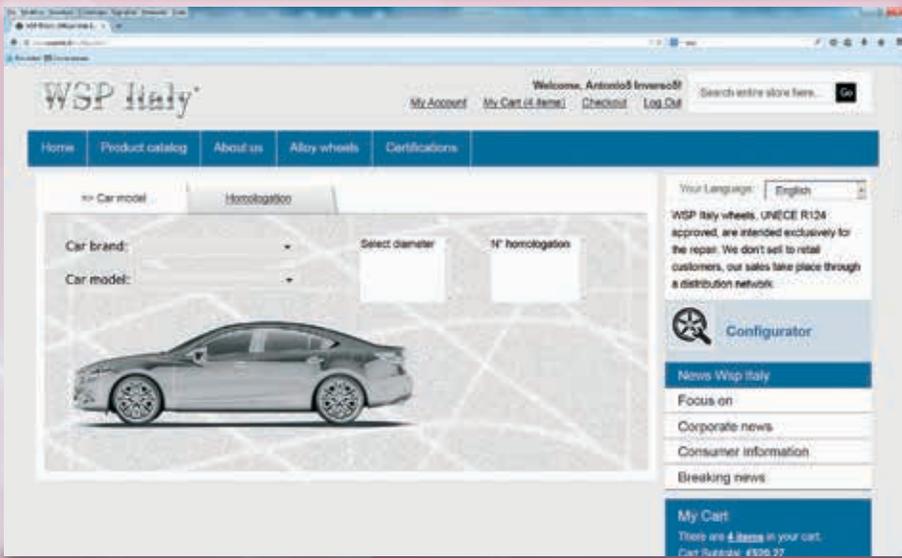

ON THE BOX

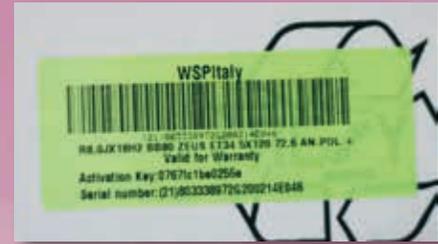

IN THE BOX

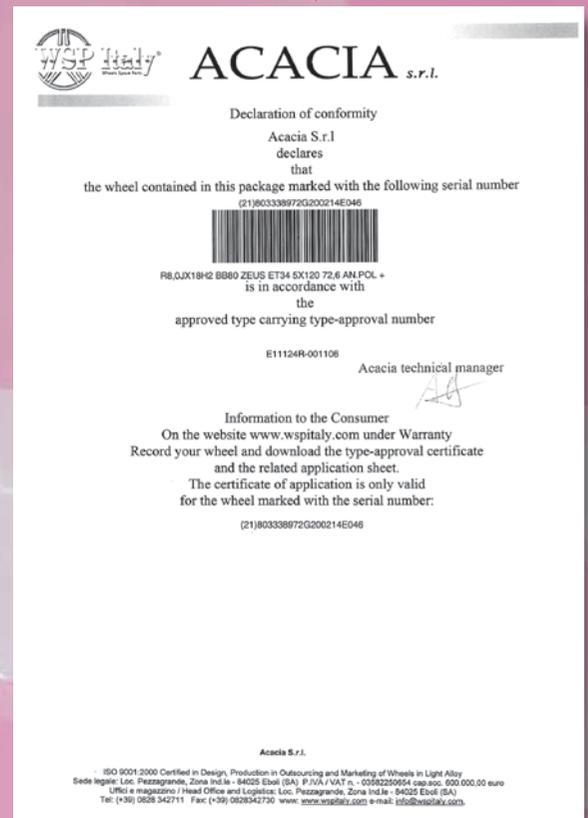


ON THE WHEEL



E11 124R 001106
780 kg
(21) 30338922G200214E046

ON THE WEBSITE

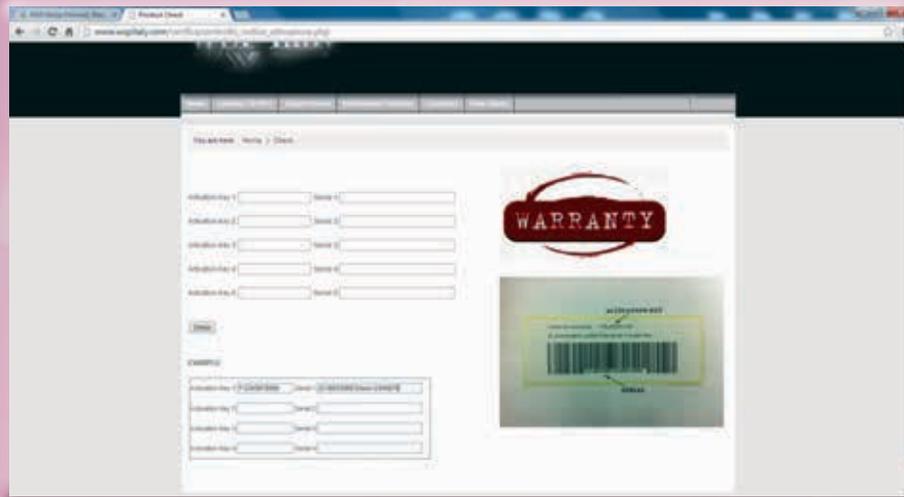

Note: "WSP Italy declines any responsibility in case of any damage due to incorrect assembly of the wheels to the car or for fitments not indicated or also in case of mistakes made by people in charge of assembly."

FROM THE WEBSITE

VCA
THE UNITED KINGDOM VEHICLE APPROVAL AUTHORITY

COMMUNICATION CONCERNING THE APPROVAL GRANTED OF A WHEEL TYPE, PURSUANT TO REGULATION NO. 124 SUPPLEMENT 1

E11 Approval No: 124R-001106

Extension No: Not applicable

- Wheel manufacturer: ACACIA Srl
- Wheel type designation: BM80 8,0x18
 - Category of replacement wheels: Pattern part replacement wheels
 - Construction material: Aluminium Alloy Al-Si 7%
 - Method of production: Cast
 - Rim contour designation: 8,0Jx18 H2
 - Wheel inset/outset: ET 34
 - Wheel attachment: PCD 5 x 120
 - Maximum wheel load and respective theoretical rolling circumference: 7.651 N (780 kg) and 2.000 mm
- Address of the manufacturer:
ACACIA Srl
Via Pezzagrande D/2
84025 Eboli (SA)
Italy
- If applicable, name and address of manufacturers' representative: Not applicable
- Date on which the wheel was submitted for approval tests: 27 March 2013

15HQ72332 19-Dec-13

An executive agency of the Department for Transport
August 2012 Revision 2

Ruota Tipo – Wheel Type : BM80 8,0x18

- minimum clearance for brake components (worst case, for example with new brake linings): > 3 mm
- minimum clearance for suspension components (worst case, for example upper and lower suspension arms): > 4 mm
- minimum clearance for steering components (worst case, for example track rod and steering joints): > 4 mm and
- minimum clearance between balance weights and vehicle components: > 2 mm.

VERIFICATION
To check and verify the wheel caliper criteria we must previously identify the vehicle's manufacturer replacement wheels.

CASE	Designazione internazionale del cerchio International wheel designation	Size	ET	PCD	CB	Vehicle Type (*)	Vehicle Model name (*)	Approval No.
A	1	8,0 J X 18 H2	34	5 x 120	72,6	Vehicle Type and Vehicle Model Name under approval No.	#1200146-311261P014	#1200146-311261P014
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P015	#1200146-476261P015
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P016	#1200146-476261P016
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P017	#1200146-476261P017
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P018	#1200146-476261P018
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P019	#1200146-476261P019
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P020	#1200146-476261P020
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P021	#1200146-476261P021
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P022	#1200146-476261P022
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P023	#1200146-476261P023
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P024	#1200146-476261P024
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P025	#1200146-476261P025
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P026	#1200146-476261P026
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P027	#1200146-476261P027
						Vehicle Type and Vehicle Model Name under approval No.	#1200146-476261P028	#1200146-476261P028

[*] More info: www.wspitaly.com

Pagina 5 di 7 19-Dec-13

Le **Ruote di Acacia** sono ruote di **ricambio compatibili** secondo la definizione del Regolamento N° 124 della Commissione per l'Europa delle Nazioni Unite (UNECE) paragrafo 2.4.4

Cos'è una ruota di **ricambio compatibile**?

Una ruota di ricambio compatibile è una parte di ricambio che rispetta pienamente le caratteristiche tecniche della ruota OEM ed in particolare:

- **STESSA DIMENSIONE E STESSO ET**

Le dimensioni originali dei cerchi sono importantissime per consentire al pneumatico di lavorare come previsto dal progettista del veicolo.

Infatti un cerchio troppo largo o troppo stretto causa problemi. Se il cerchio è troppo largo a pressione nominale il battistrada non riesce a estendersi completamente sul manto stradale ma si deforma compromettendo l'aderenza. Se il cerchio è troppo stretto la pressione all'interno del pneumatico tende a farlo stallonare e anche le forze in curva lo deformano pericolosamente.

La dimensione dell'ET è importantissima perché si corre il rischio di interferenza del sistema ruota/pneumatico col parafranghi o, viceversa, con le pinze freni e la tirante ria dello sterzo.

*The **Wheels offered and sold by ACACIA Srl** are **compatible spare parts** in accordance with the Regulation No. 124 of the Economic Commission for Europe of the United Nations (UNECE), paragraph 2.4.4.*

*What is a **compatible spare parts**?*



A compatible spare part fully respects the features of the O.E.M. wheel. In particular, they have:

- **SAME SIZES AND SAME ET**

The original dimensions of a wheel are really important because they let the tyre work as per the vehicle project. In fact a larger or smaller wheel causes problems. If the rim is too large, the tread, at a nominal pressure, can not extend fully on the road and it may deform compromising its adhesion.

If the rim is too narrow, the pressure in the tyre tends to roll it off from the wheel and in addition the forces in curve deform it dangerously.

The ET dimension is really important because you can risk interferences between the system wheel/tyre and the fenders or, between the brakes callipers and the steering linkage.

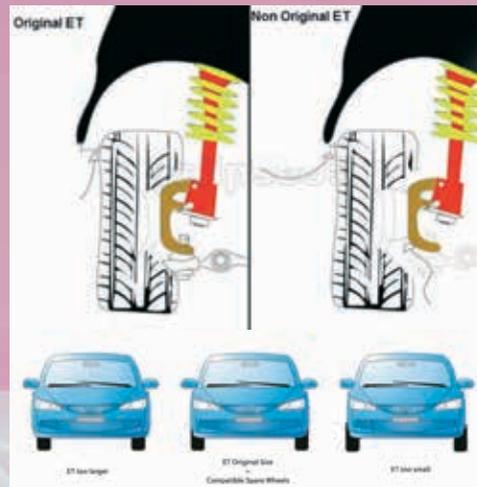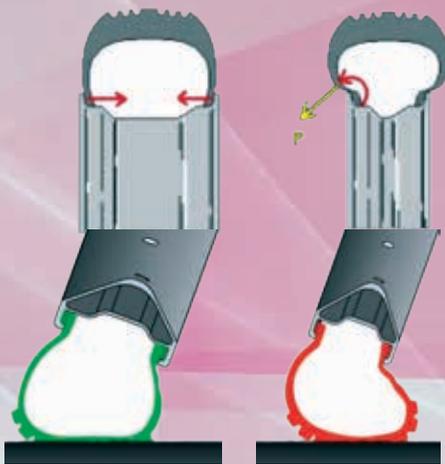


- **STESSO PCD**

L'uso di ruote con un PCD differente necessita dell'uso di adattatori che si interpongono tra la ruota e il mozzo del veicolo. Per loro natura essi modificano la geometria del sistema ruota-sospensione rendendo il veicolo difforme dalla propria omologazione e dai criteri di sicurezza verificati dal progettista.

- **SAME PCD**

The use of wheels with a different PCD involves the usage of adapters that will be interposed between the wheel and the vehicle hub. They modify the geometry of the system wheel/suspensions, making the vehicle not respondent to its approval and to the safety criteria verified by the designer.

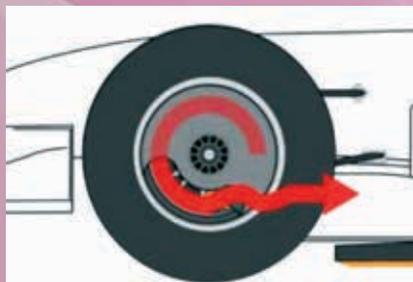

- **VENTILAZIONE FRENI**

La forma e la dimensione dei fori di ventilazione determina l'efficienza di ventilazione dei freni. Essa incide direttamente sulla sicurezza del veicolo.

Fori non dimensionati correttamente determinano gravi rischi di surriscaldamento.

- **BRAKES VENTILATION**

The shape and sizes of the ventilation holes determine the efficiency of the ventilationsystem of the brakes. It directly affects with the safety of the vehicle. Holes not properly sized lead to serious risks of overheating.

- **LO STESSO FORO CENTRALE E CAPS ORIGINALI E DADI / BULLONI**

Le nostre ruote hanno Central Bore (CB/Hub) di dimensioni originali. Questo è importantissimo nel montaggio della ruota che viene centrata perfettamente sul veicolo laddove l'uso di anelli di riduzione crea problemi oltre a indebolire la struttura della ruota nella zona nevralgica del cerchio di montaggio sui mozzo. Inoltre la perfetta rispondenza alle specifiche di ogni casa costruttrice consente il montaggio di bulloneria e coprimozzi originali senza dover ricorrere ad accessori insicuri o non rispondenti esteticamente agli originali che compromettono l'identità di brand dell'intero veicolo.

- **SAME CENTRAL BORE AND ORIGINAL CAPS AND NUTS/BOLTS**

Our wheels have got original dimensions Central Bore (CB/Hub). This is important when installing the wheel because it would be perfectly centred on the vehicle. On the contrary, the use of reduction rings creates problems, and it weakens the structure of the wheel.

Moreover the correspondence of each features of the original manufacturer and ours, lets mount the original cap and bolts avoiding not safe accessories or not respondent to the original ones, compromising, in that way, the brand identity of the vehicle.

RISPETTO DELLA PROPRIETÀ INTELLETTUALE

LE NOSTRE RUOTE SONO RICAMBI COMPATIBILI AI SENSI DELLA 461/2010

Le ruote WSP Italy, esclusivamente destinate ai fini della riparazione, sono ruote di ricambio ai sensi del regolamento 461/2010. Ruote che utilizzano accessori, come per esempio gli anelli di centraggio, per adattare una ruota con hub 66,6 a 57,1 non sono ruote di ricambio con tutto quello che questo comporta in termini di legge sulla proprietà intellettuale del disegno originale. Chi vende ruote con disegno simile all'originale ma con elementi dimensionali diversi dall'originale potrebbe essere perseguito per violazione degli artt. 129, 130 e 131 del Codice della Proprietà Industriale.

FEDELTÀ DI FORMA E DIMENSIONI: RUOTE SOSTITUTIVE REPLICA E REPLICA PARZIALE.

Le ruote di ricambio replica WSP Italy sono ruote che hanno dimensioni e forma identiche a quelle originali e per questo WSP Italy pone grande attenzione ai minimi particolari compresi il colore e la contabilità degli accessori originali (vedi coprimozzo). Esse vengono pertanto commercializzate nel pieno rispetto della clausola di riparazione e per essere montate esclusivamente sui veicoli per i quali le case costruttrici li prevedono. Le ruote WSP Italy sono destinate esclusivamente a fini di riparazione per il ripristino dell'aspetto originario del veicolo.

MONTABILITÀ DEL COPRIMOZZO ORIGINALE

L'identità delle ruote sostitutive di WSP Italy rispetto alle ruote originali dei costruttori garantiscono che sulle ruote di WSP Italy siano montabili gli accessori originali, sia in termini di bulloneria che di coprimozzi. In corrispondenza di ogni modello sul nostro sito www.wspitaly.com in una apposita sezione sarà indicato il part number di ricambio del coprimozzo originale corrispondente.

OBSERVANCE OF INTELLECTUAL PROPERTY

OUR WHEELS ARE COMPATIBLE SPARE PARTS UNDER THE LAW 461/2010

According to the regulation 461/2010 the wheels WSP Italy, intended exclusively for the repair, are spare wheels, in other words they are perfectly interchangeable with the originals. Wheels using accessories, such as central rings, to adapt a wheel with hub 66.6 to 57.1, are not spare wheels with all that this implies in terms of law about intellectual property of the original design. Who sells wheels with a similar design to the original, but with dimensional elements different from the original, could be persecuted for violation of industrial property.

ACCURACY OF THE SHAPE AND DIMENSIONS: REPLICA REPLACEMENT WHEELS AND PARTIAL REPLICAS.

The replica spare wheels WSP Italy are wheels that have identical form and dimensions as the original ones and for this WSP Italy pays great attention to the smallest details including the colour and the compatibility of the original accessories (see hubcap). They are therefore sold in full compliance with the repair clause and to be mounted only on vehicles for which the manufacturers provide them. The WSP Italy wheels are intended exclusively for repair purposes in order to restore the original aspect of the vehicle.

SUITABILITY OF THE ORIGINAL HUBCAP

The identity of the replacement wheels WSP Italy compared to the original wheels of the builders ensures the fitment of the original accessories, both in terms of the bolts and hubcaps, on the WSP Italy wheels.

On our website www.wspitaly.com, in a special section, will be indicated the replacement part number of the corresponding original hubcaps for each model.

PARTICOLARITÀ COSTRUTTIVE

I NOSTRI PRODOTTI IN FLOW FORMING

All'avanguardia nell'adozione della tecnologia flow forming che permette di avere ruote più leggere e più resistenti, a causa della temperatura di lavorazione più bassa, rispetto alla colata tradizionale. I vantaggi del flow forming sono particolarmente sensibili per ruote di grande diametro o per applicazioni Racing.

INFORMAZIONI SULLE RUOTE CROMATE

La cromatura è una lavorazione di rivestimento di cromo sull'alluminio per proteggerlo dalla corrosione tramite procedimento galvanico. Altri benefici sono l'indurimento superficiale del materiale (il cromo è un metallo duro). L'aspetto estetico delle ruote cromate è estremamente accattivante in particolare per applicazioni Tuning.

POWDER COATING

Il powder coating è un tipo di verniciatura che viene applicata come un flusso libero di polvere secca. La differenza principale tra una verniciatura convenzionale a base liquida e la verniciatura a polvere è che quest'ultima non richiede solventi per mantenere il legante e il fondo in una forma di sospensione liquida. La verniciatura è generalmente applicata elettrostaticamente ed è poi trattata termicamente per consentire di fluire a formare una "pelle". La polvere può essere termoplastica o termoindurente ed è usata per creare una finitura più dura rispetto alle verniciature convenzionali. Ci sono vari vantaggi della verniciatura a polvere rispetto a quella convenzionale:

1. La verniciatura a polvere emette zero o quasi zero composti organici volatili (VOC)
2. La verniciatura a polvere può avere spessori più sottili della convenzionale senza pericolo di cedimenti
3. La verniciatura a polvere durante le lavorazioni produce meno perdite pericolose.
4. I prodotti verniciati a polvere hanno uniformità di aspetto tra le superfici orizzontali e verticali a differenza dei prodotti con verniciatura a base liquida.
5. La verniciatura a polvere permette di ottenere una grande varietà di effetti speciali che sarebbe impossibile ottenere con altri processi di verniciatura

CONSTRUCTION PARTICULARITIES

OUR PRODUCTS IN FLOW FORMING

WSP Italy is in the forefront about the application of the flow forming technology that allows the production of lighter and stronger wheels due to the lower manufacturing temperature compared to the traditional casting temperature. The advantages of the flow forming technology are especially important for big size wheels and racing application.



Flow Forming Machine

CHROMED WHEELS INFORMATION

The chroming is a coating process of chrome on aluminum, in order to protect it from the galvanic corrosion. Moreover, the chrome coating leads to the hardening of material surface (chrome is a hard metal) and it makes wheels appearance extremely winning, especially for Tuning applications.

POWDER COATING

Powder coating is a type of coating that is applied as a free-flowing, dry powder. The difference between a conventional liquid paint and a powder coating is that the powder coating does not require a solvent to keep the binder and filler parts in a liquid suspension form. The coating is typically applied electrostatically and is then cured under heat to allow it to flow and form a "skin." The powder may be a thermoplastic or a thermoset polymer. It is usually used to create a hard finish that is tougher than conventional paint. There are several advantages of powder coating over conventional liquid coatings:

1. Powder coatings emit zero or near zero volatile organic compounds (VOC).
2. Powder coatings can have much thinner layers of coatings than conventional liquid coatings without danger of giving in.
3. Powder coating production lines produce less hazardous waste than conventional liquid coatings.
4. Powder coated items generally have fewer appearance differences between horizontally coated surfaces and vertically coated surfaces than liquid coated items.
5. A wide range of special effects is easily accomplished which would be impossible to achieve with other coating processes.

INSTALLATION INSTRUCTIONS

- Maximum load rating and maximum tire diameter

Always use the wheel selection chart to make sure the wheel you are installing has the proper load carrying capacity for the vehicle and the maximum tire diameter rating is not exceeded. Wheel load rating requirements are determined by dividing the vehicle's heaviest axle rating by 2. The axle rating for most vehicles is shown in the identification label located on the drivers side's door jam or the vehicles owners manual. Regarding of the tire load rating, do not exceed the maximum load rating of the wheel.

Warning

- Replacing tires with the wrong diameter could interfere with ABS braking, cause braking failure and result in serious injury or death. Insure replacement tire size is within +2% or -3% of the original diameter.
- Exceeding the maximum wheel load rating or maximum tire diameter could cause wheel failure and result in serious injury of death. Verify load ratings on the wheel selection chart.

Wheel selection charts

1 - Piece aluminium: this chart shows minimum ratings for all 1 piece aluminium wheels. Some styles have higher load ratings and allow larger tire diameters. The exact rating for each style see the current distributor price sheet, application guide or call your local distributor.

WHEEL FIT CHECK

Perform a wheel fit check using the following steps before mounting tires. This check must be done at each wheel mounting location.

- a) remove one front and one rear wheel from the vehicle.
- b) wire brush ten wheel mounting surface and threaded studs on vehicle.
- c) remove spring clip retainers, if applicable.
- d) hold the new custom wheel on the hub and check for a flush mount of the wheel to the mounting surface of the vehicle. The backside of the wheel must not rest or touch any brake caliper, suspension component, balance weights, rivets, or the other obstructions. The mounting surface of the wheel must fit flush to the vehicles hub mounting surface.

WARNING

Modifying the wheel to resolve clearance problems can result in wheel loss and cause serious injury or death. Always use proper wheel size.


LUG NUTS AND HUB COVERS

All approved accessories for each wheel style are listed in the current price sheet. If you do not have a current price sheet or you are not sure of the current accessories to be used, call your local distributor.

Lug nuts: the three basic types of lug nuts are conical seat (60 degree taper) mag or shank style and spherical ball seat. Shown below is the drawing of each type in its proper application.

WARNING

- Failure to use approved accessories can result in wheel loss and cause serious injury or death. Use manufacturer approved lug nuts, wheel lock and hub covers designed for wheel.
- Using the wrong type of lug nuts will lose torque resulting in wheel failure and cause serious injury.
- Use conical seat type lug nuts on conical seat type lug holes. Only use the type of lug nut compatible with the type of lug hole.
- Use mag or shank type lug nuts on mag or shank type lug holes. Use ball seat or spherical lug nuts on spherical or ball seat type lug holes.
- Never use lubricant on lug nuts or lug studs as this may result in loss of torque or wheel loss causing serious injury or death.

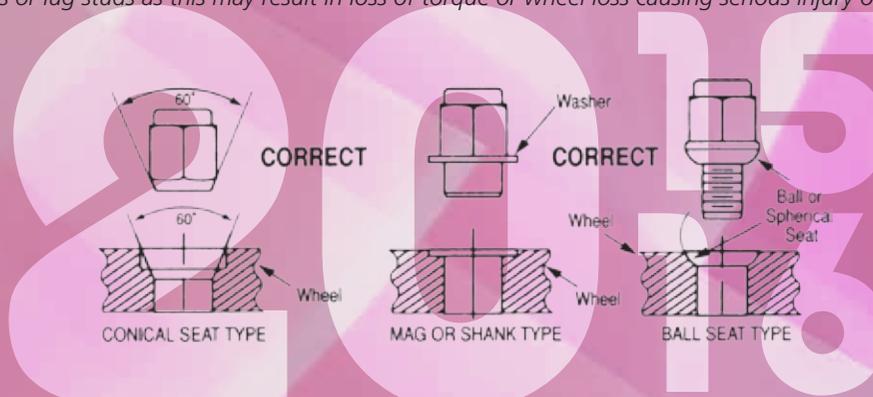

DEFINITION

- 1) DEFINITION OF "OFFSET": the distance from the centerline of the wheel to the face of the mounting surface of the wheel.
- 2) DEFINITION OF "X FACTOR": X factor means caliper clearance (or brake clearance).
- 3) DEFINITION OF "BACK SPACING" (or REAR SPACING): the distance from extreme back edge of rim to wheel mounting surface (PAD)

ATTENTION:

Before mounting the tyre on the wheel check carefully that the wheel perfectly fits and turns on the hub.

TIRE MOUNTING

Danger: wheel-tire size incompatibility will cause tire to explode or wheel to fail, resulting in serious injury or death. Make sure the wheel and tire are of the same sizes before mounting. Never mount 16" tire on 16,5" wheel.

The wheels and tires are clearly marked with their sizes. Take extra caution to make sure the wheel and the tire are the same size before mounting.

Wheel damage from the tire mounting equipment is not covered by your warranty. We insist on the following procedures to eliminate any problems.

- 1) Mount tire according to the tire machines recommended safety procedures including but not limited to eye protection.
- 2) Tire manufactures rim width recommendations must be followed in wheel size selection. All custom wheels are designed to be compatible with E.T.R.T.O.
- 3) Be sure the tire equipment does not grip or scrape the wheels plated or aluminium surfaces. Protect those surfaces by padding or other appropriate means.
- 4) The hold-down cone normally used to hold an original equipment steel wheel in place on a tire mounting machine should not be used on an aluminium wheel, unless the proper adapter is used. The center hole on aluminium wheels will be damaged by the hold-down cone unless the proper adapter is used.
- 5) Use tire mounting lubricant liberally. Lubricant must be applied to both the tire head and bead seat area of the wheel on both sides.
- 6) Be careful that the bottom bead breaker on changing equipment does not hit the bottom of the wheel as it travels upwards. Aluminium wheels have thicker rim sections than steel wheels and the bottom bead breaker will hit the wheel, do not mount the tire until you have attained the proper shims or other equipment from the changer manufacturer to overcome this potential problem.

Warning: Do not exceed 40 PSI when seating the tire to the bead of the rim. Failure to do so could cause wheel fracture or catastrophic tire failure. If the tire bead does not seat on the wheel with 40 pounds of pressure, disassemble, relubricate and check for the tire-wheel size mismatch. Never exceed the tire manufacture's maximum air pressure in tire.

Danger: Do not lean over tire-wheel assembly when inflating. Tire can explode causing serious injury or death. Stand back from wheel-tire during inflation.

WHEEL INSTALLATION

Warning: failure to follow all installation instructions could result in wheel loss, resulting in serious injury or death. Read all instructions before beginning installation. Follow all instructions in the order presented.

- 1) Clean and inspect all stud threads and mounting surfaces before installation. Threads must be not lubricated, but must be free of corrosion, rust, burrs and fractures. Replace studs if they are corroded beyond reasonable repair, if threads are stripped, or a fracture is found.
- 2) Check and make sure the manufacture approved lug nuts are correct for application.
- 3) When placing wheel on the studs, there will be an apparent looseness of fit, until the lug nuts are applied.
- 4) Check the lug engagement. Every stud must be long enough to thread into the lug nut a length at least equal to stud diameter. For example, a 1/2 inch thread diameter must thread into the lug nut at least a 1/2 inch. Check for this problem on every stud, unsafe and will cause loss of lug nut torque. If you do not have proper thread engagement, do not install wheels.
- 5) Do not allow the lug nuts to bottom out on the stud or brake drum. This is extremely dangerous and unsafe because the torque of the lug nut is not actually being applied to the wheels. Check for this problem.



On every stud, some may be of different lengths. If you find a problem, do not install wheels.

6) Lug nuts must be tightened in a star of criss cross pattern to insure uniform pressure and the alignment. Apply torque evenly by repeating star or criss cross pattern until desired torque is reached. Shown below is the numerical sequence. Never use fewer lug nuts than the wheel and vehicle was designed for. If the wheel has 5 lug holes, then use 5 lug nuts.

7) Do not use air or impact wrenches to tighten lug nuts. They can cause thread stripping and under or over tightening. This problems will cause wheel failure that can result in severe injury or death to the vehicle occupants. Additionally, using them can mar the finish of some wheels: A calibrated torque wrench must be used to insure proper and safe installation.

8) Tighten all lug nuts to the proper torque specification listed in the vehicle owner's manual. If this information is not available, use chart below for your particular stud size.

7/16"	75-88 Nm	10 mm	61-75 Nm
1/2"	102-115 Nm	12 mm	95-109 Nm
9/16"	128-156 Nm	14 mm	102-128 Nm

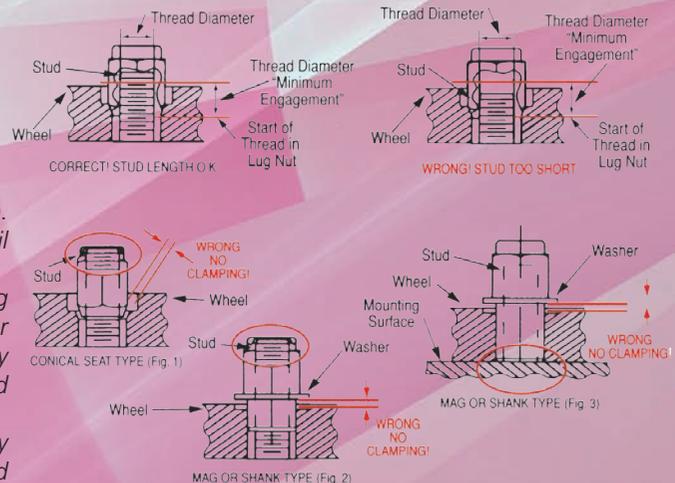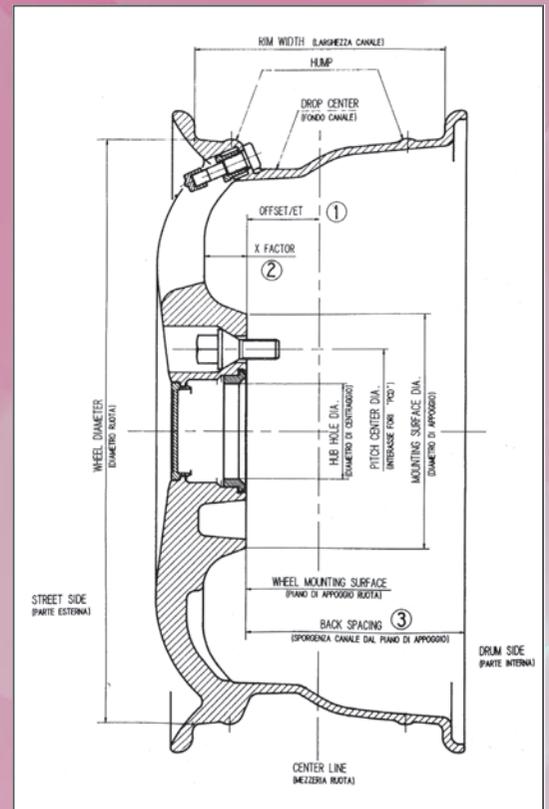

The widest range in the World

Tokyo.Los Angeles.Moscow



OUR WHEELS RUNNING AROUND THE WORLD

DISTRIBUTED BY



HIGH TECHNOLOGY
HIGH PERFORMANCE



Spare wheels compatible, not OEM, traceable, CE 461/10